


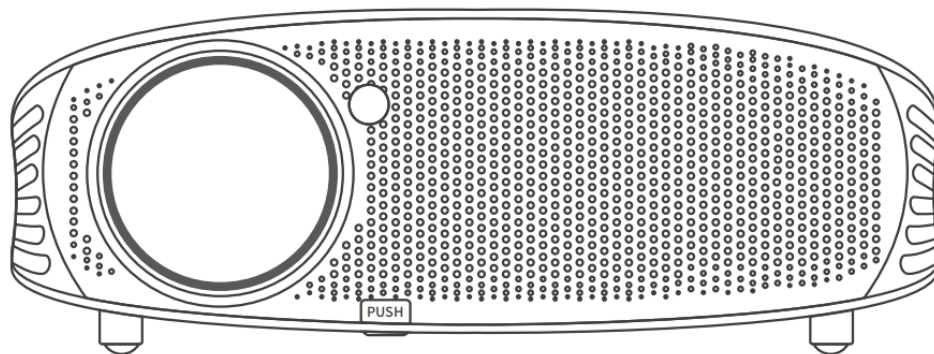

LEISURE 510


USER'S MANUAL

Please read this manual carefully before using this product.

ENGLISH



PACKING LIST

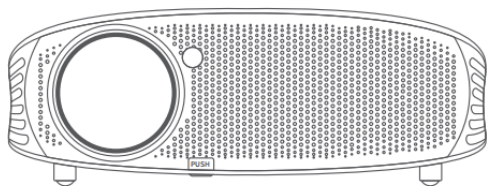

LEISURE 510




Carrying Bag




Remote




Instructions

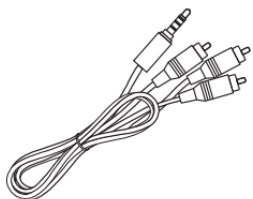

AV Cable

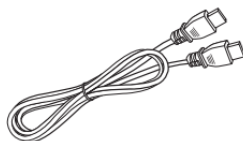


HDMI Cable

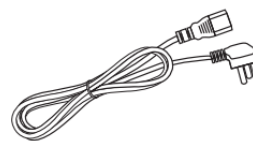


Power Cable

NOTICE





Recommended

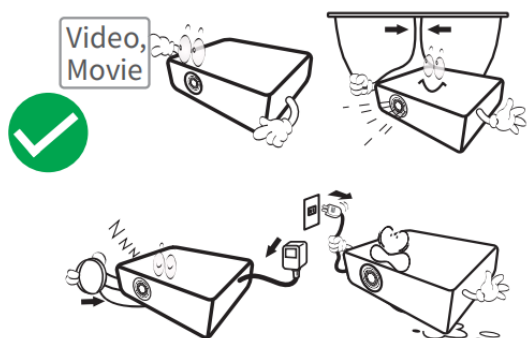

NOT Recommended

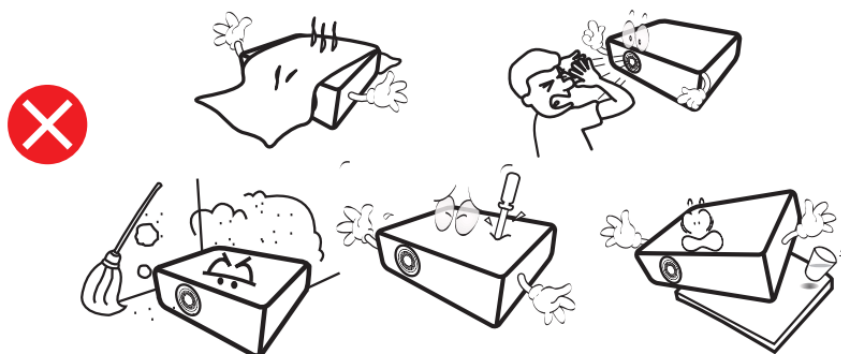


INTERFACE INTRODUCTION

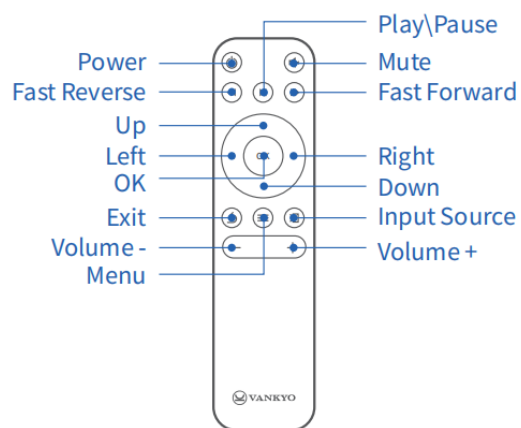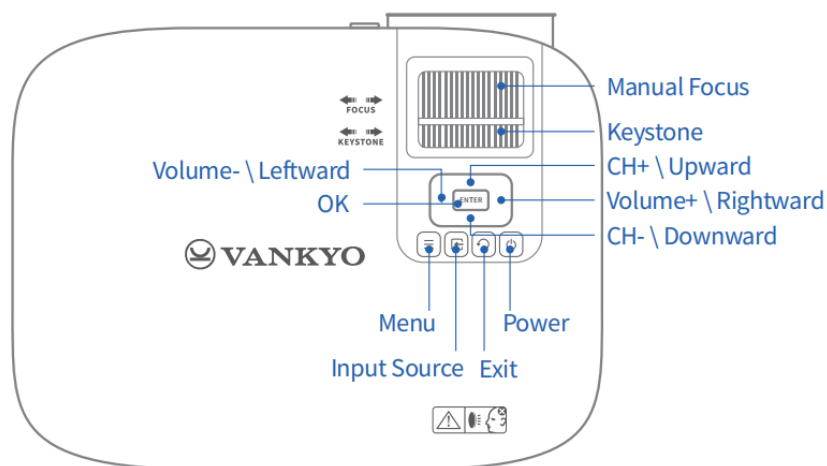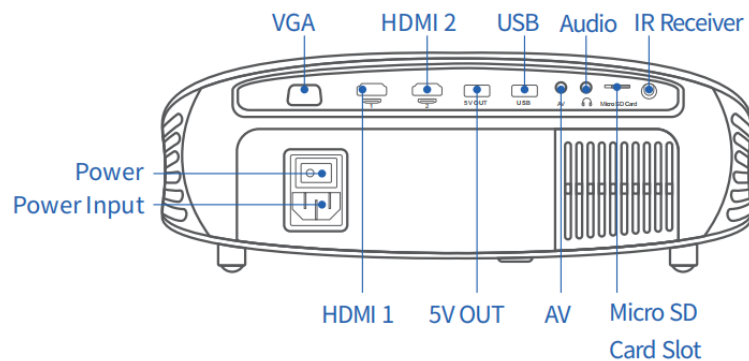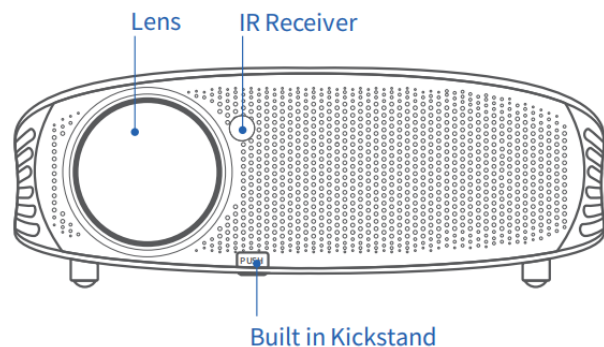


QUICK START



EN

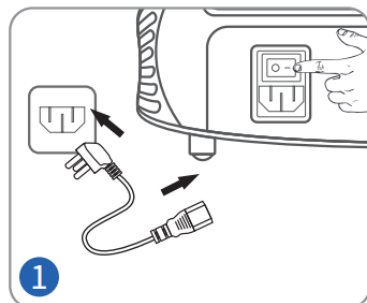


1 Plug power cable into outlet.

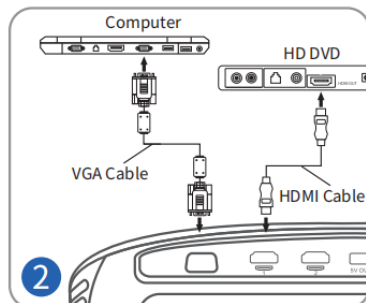


2 Connect your device to the correct port.

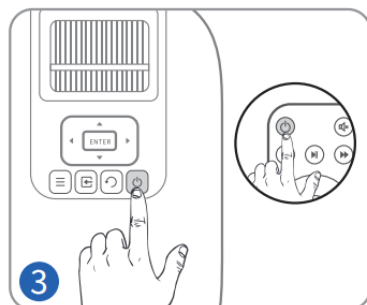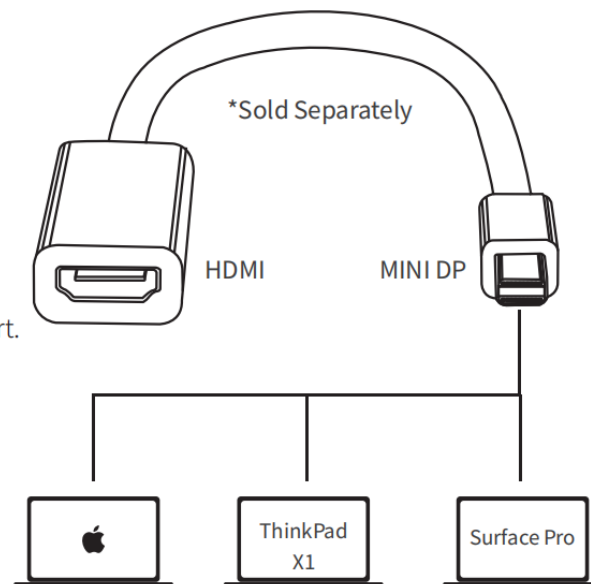


3 Press power button to turn on the projector.

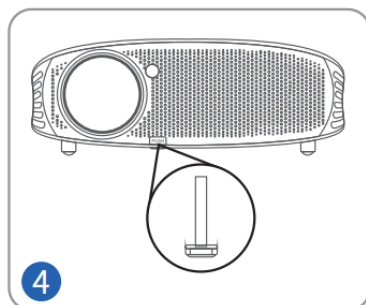


4 Adjust kickstand accordingly.

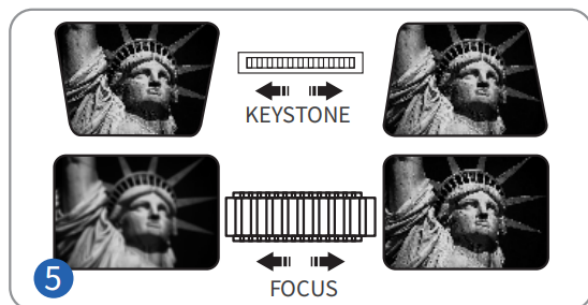

5 Adjust keystone and focus ring to get the best image performance.

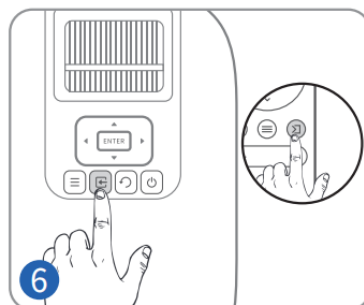


6 Select correct input source to project your device screen.

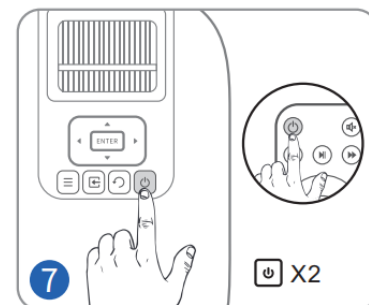

7 Press the power button twice to turn off the projector.


INPUT SOURCE

A. Multimedia Connection

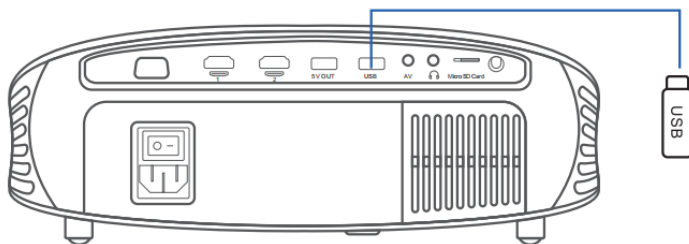


Input Source
VGA
HDMI 1
HDMI 2
AV
MultiMedia

B. HDMI Connection

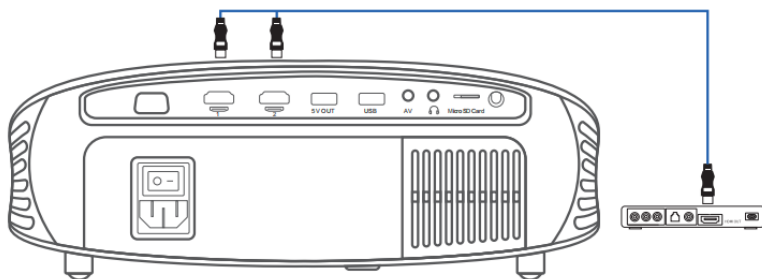


Input Source
VGA
HDMI 1
HDMI 2
AV
MultiMedia

C. VGA Connection


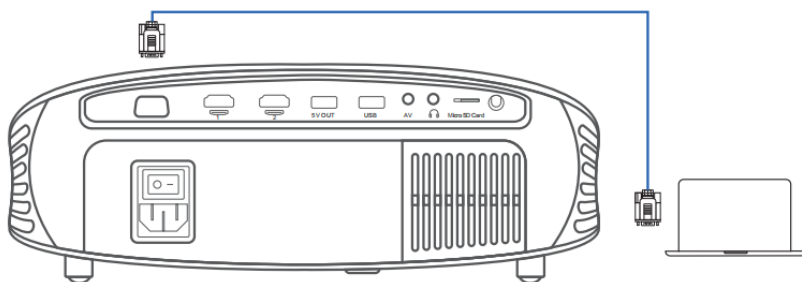


Input Source
VGA
HDMI 1
HDMI 2
AV
MultiMedia

PROJECTOR CONNECTION

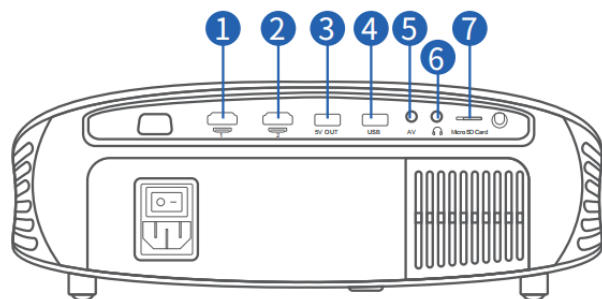

PROJECTION DISTANCE & SIZE

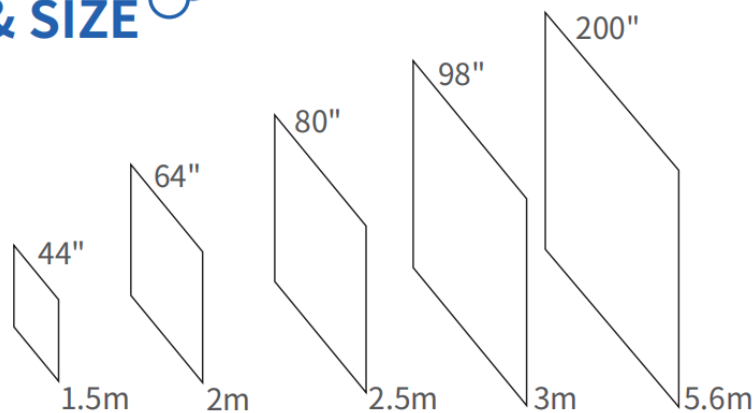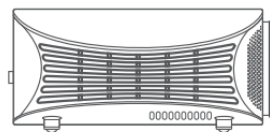

SPECIFICATION

Imaging Technology	LCD	Output	Audio Out*1/5V Out*1
Resolution	1280*768	Speaker	3W*2
Light	LED	Unit Size	310.7*239.3*117.6mm
Projection Distance	1.5M-5.6M	Net Weight	2.5kg
Screen Size	44"-200"	Projection Method	Front/Rear/Ceiling
Aspect Ratio	AUTO/4:3/16:9	Audio File	AAC/FLAC/M4A/MP3/OGG/ WAV/WMA
Focus	Manual	Picture File	BMP/JPG/PNG
Keystone	±15°	Text File	TXT
Power Input	100V-240V 50/60Hz	Video File	ASF/AVI/DAT/DIVX/FIV/MKV/ MOV/MP4/MPG1/RM/RMVB/ TRP/TS/VOB/WMV
Integrated Watt	130W		
Input	VGA*1/HD*2/USB*1/AV*1/ Micro SD*1		

TROUBLESHOOTING GUIDE

1. No Sound

- * Turn Dolby audio off in your device.
- * External speaker is required for VGA cable connection.

2. Blurry Image

- * Adjust focus ring/keystone.
- * Projector and wall/screen must be in effective distance.

3. Remote Unresponsive

- * Make sure remote points at IR receiver directly.
- * Do not cover IR receiver.

4. Mobile Connection

iOS: Genuine lightning to HDMI cable

Android: Micro USB to HDMI adapter/Type C to HDMI cable

5. Up Side Down Images

Enter "Menu" on projector remote to flip the projection image.

LIFETIME TECHNICAL SUPPORT

North America	support@ivankyo.com
United Kingdom	support.uk@ivankyo.com
Deutschland	support.de@ivankyo.com
France	support.fr@ivankyo.com
Italia	support.it@ivankyo.com
España	support.es@ivankyo.com
日本	support.jp@ivankyo.com

