


Projecteur Proiettore Projector Projektor Proyector

Micro Portable LCD Projector

USER'S MANUAL

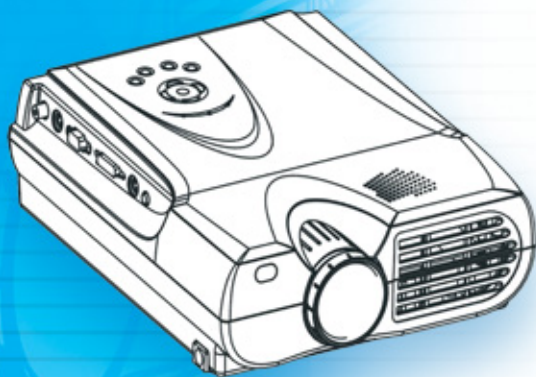

MAIN PAGE

CONTENTS

Overview

Features & Warnings	1
---------------------------	---

Checking the Accessories

Standard and Optional Accessories	2
---	---

Definitions of Keys and Indicators

Remote Controller and Keys of Control Panel	3
Definitions of Indicators and Definitions of key functions	4

Setting Up

Location for Setting Up	5
Zoom , Focus and Height Adjustment	6

External Connections

Connecting to PC	7
Connecting to Video Signals	8

OSD (On Screen Display) Menu

Display/Exit OSD Menu	9
Image Quality Adjustment	9
Advanced Setting Adjustment	10
Advanced Scale Adjustment (Digital Zoom)	11
Options	12
Audio Adjustment	13
PIP Adjustment	13

Maintenance

Handling of Abnormality	14
Replacing Main Lamp	15

Appendix.....	16
---------------	----

Overview

Features

- 2.7kgs Micro-Portable projector.
- High Brightness with high Contrast ratio, total power consumption 220 W.
- A wide variety of External Connections available for D-Sub 15 pin, S-Video, RCA composite signal and DVI Input (XGA Type) .
- Good Compatibility : horizontal scanning frequency from 15 to 90KHz, and vertical scanning frequency from 43 to 85Hz , VGA to SXGA Signals.
- Short projection distance for Big image size.
Projection distance 1.33m~8.33m with screen size from 40”to 200”.
- Powerful functions : Keystone correction function 、freeze and blank function 、 Digital zoom adjustment and PIP(Picture In Picture) function.
- Remote controller with Track Ball Mouse function and Laser Pointer function.

Warnings

- While projector is working, don't look into the lens to avoid harm of eyes.
- Do not use projector near heater or water.
- While projector is working, make sure that there is no barrier to the heat dissipation holes of the front and rear side of projector.
- Do not use multiplex socket, to avoid overload or short circuit.
- The lamp of the projector is high voltage mercury lamp, which needs specific driving circuit. Please use the specific lamp provided by your dealer.
- Never let water or other things splash into the heat dissipation holes.
- To shut down the projector, when you press the Power key, a message will show on the image asking if you're sure you'd like to shut down, press Power key again to proceed the heat dissipation and shut down procedure.
- Do not turn off the power without using the heat dissipation and shut down procedure. You must wait until the cooling fan stop. If the machine is not to be used for a long time, the power plug must be pulled off to avoid danger.
- No further dismantle of the projector except listing in the operation manual.
- When cleaning filter sponge, please use vacuum cleaner than water to avoid moisture entering the projector.
- When replacing the lamp module, please wait for the lamp cool down.
- When changing the lamp module, do not touch the glass in front of the lamp. It will effect the lamp life.

Checking the Accessories

Standard Accessories


- Projector
- Lens Cover
- Power Cord
- Remote Controller
- No.4 AAA Battery x 2
- Audio Wire-Phone Jack
- S-Video Wire
- D-Sub 15pin Cable
- Audio Wire-RCA Jack
- DVI Interface connecting wire (XGA Type)
- Video Wire-RCA Jack
- PS/2 Mouse connecting wire
- User's Manual
- Carrying bag for projector and accessories (XGA Type)



XGA Type



SVGA Type

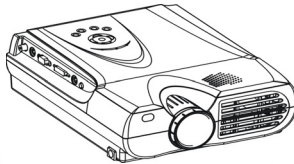

Lens Cover



 
Remote Controller



Power Cord



PS/2 Mouse



DVI Wire
(XGA Type)



Audio Wire
(RCA Jack)



S Terminal Wire



VGA Wire



Video Wire
(RCA Jack)



Audio Wire
(Phone Jack)



Carrying Bag
(XGA Type)



User's Manual

Optional Accessories

- Spare Lamp
- Sponge for air filter


You can purchase these spare accessories from your dealer.

Definitions of Keys and Indicators

Remote Controller



Keys of Control Panel

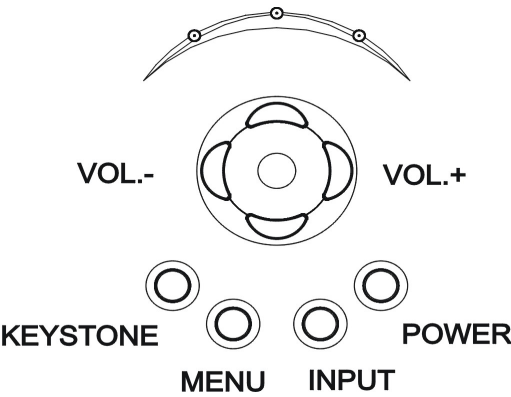

Definitions of Indicators

	⦿Red	⦿Green	⦿Orange	Meaning
Normal Indicator	Off	On	Off	Standby Mode
	Off	Off	On	Normal Working Mode
	Off	Alternate Flash per second		Heat Dissipating
Abnormal Indicator	Flash	Off	On	Abnormal Fan (Heat Dissipating)
	Flash	Off	Off	Abnormal Fan
	Off	Off	Off	No Power


Definitions of key functions

Key	Function (Under normal working mode)
Power	● Press Power button to turn on the projector. ● Press Power button twice to shut down the projector.
Menu	● Press Menu button to bring up the OSD menu.
Exit	● Press Exit button to leave OSD menu.
Input	● Select input signal of VGA 、S-Video 、AV or DVI (XGA Type) in sequence.
Keystone	● Adjust Shape of Image from keystone to square.
Volume	● Adjust the volume.
Laser	● Laser Pointer.
Auto	● Auto adjust the image quality (Only on VGA mode).
L/R	● L : Left click of the mouse. R : Right click of the mouse.
Track ball	● Use the track ball to move the cursor, press the track ball to active the drag function.
Mute	● Press Mute key for Sound Off , sound On when you press again.
Black	● Press Black key to let the image blank, press again when you want the image show again.
Freeze	● Press the Freeze Key to let the image freeze(stop) in a picture, press again when you want to continue.
Enlarge	● Press the Enlarge Key and press +/- key to enlarge or reduce the Image press     to move the image.
Source	● Switch the sub picture as AV input or S-Video input.
PIP	● Picture in Picture Function.

Setting Up

Locations for Setting Up

- Projector shall be placed on steady desktop or use specific tooling to hand on solid ceiling.
- Adjust projector so the lens is perpendicular to screen, otherwise, the image on screen will have trapezoidal shape.

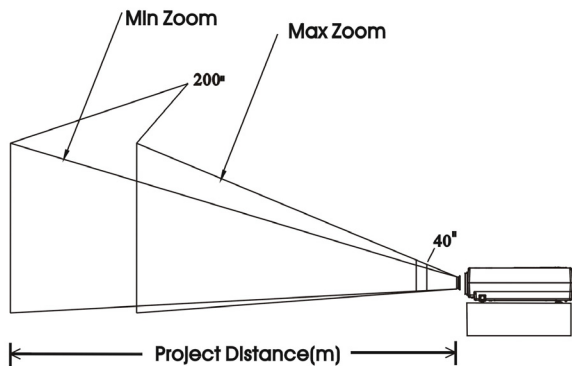


Projection Distance /Size Table

Projection Size/inch	Project Distance /m Max Zoom	Project Distance/m Min Zoom
40"	1.33	1.67
50"	1.67	2.08
60"	2.00	2.50
100"	3.33	4.17
150	5.00	6.25
200"	6.67	8.33

Zoom, Focus and Height Adjustment


Focus , Magnitude Adjustment

- When the image appears on the screen, use these functions to focus and adjust screen alignment.
- Actual projected display size depends on the distance between the projector and the screen, as well as the magnitude of projector lens.
- Focus adjustment : Turn the focusing ring of the lens, which is the outer ring at the lens in front side of projector.
- Size adjustment : Turn the inner side zoom ring, increase when clockwise.

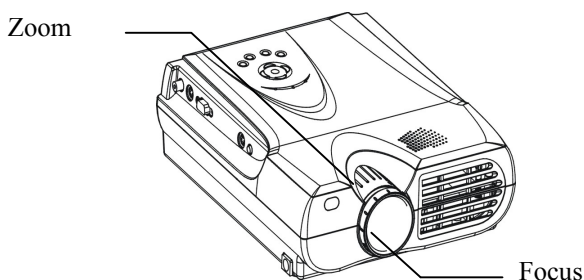

Adjustment for Height and Deformation of Projection


- Stand behind the projector and raise up the forward projector with both hands, then press the release button to lower the elevating feet.
- Free the release button to lock the sustaining foot and set the projector down carefully.
- Be careful when operating and keep the projector from dropping.

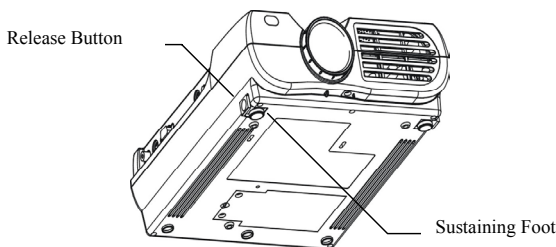

External Connections


Connecting to PC

- Connect the D-Sub 15 pin cable from the VGA card of the computer into the VGA IN terminal of the projector .
- Mark sure that both parts have a good connection.
- Turn on projector first then computer.

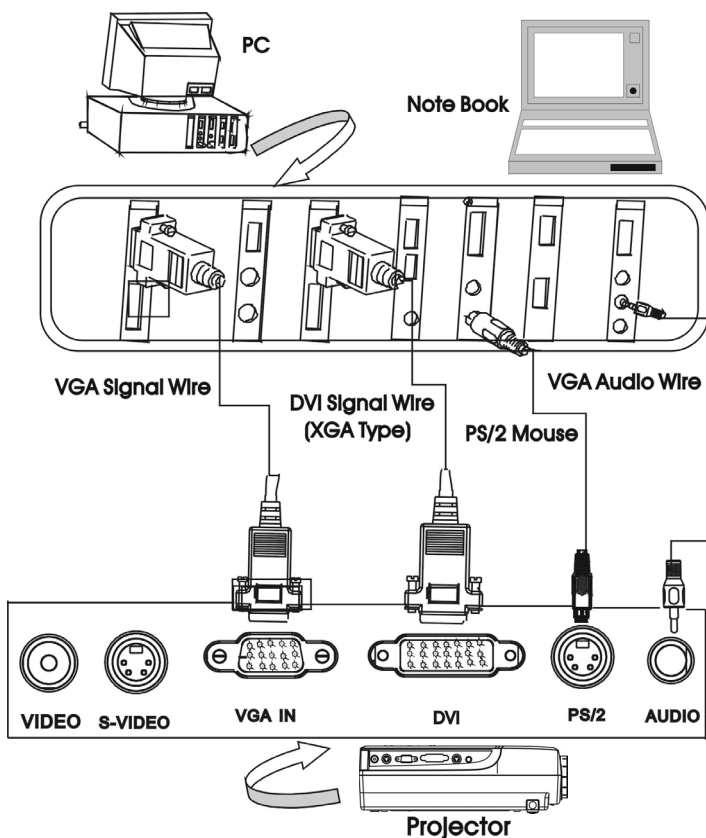


Connecting to Video Signals

- Connecting to video signal sources such as VTR , DVD or LD.
- The method for connecting RCA jack AV wire is shown below

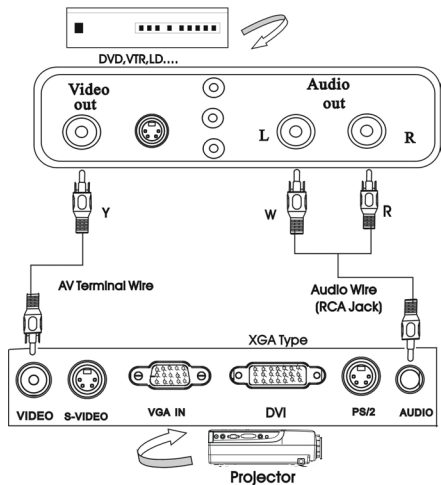

- The method for connecting S-Video Wire is shown below


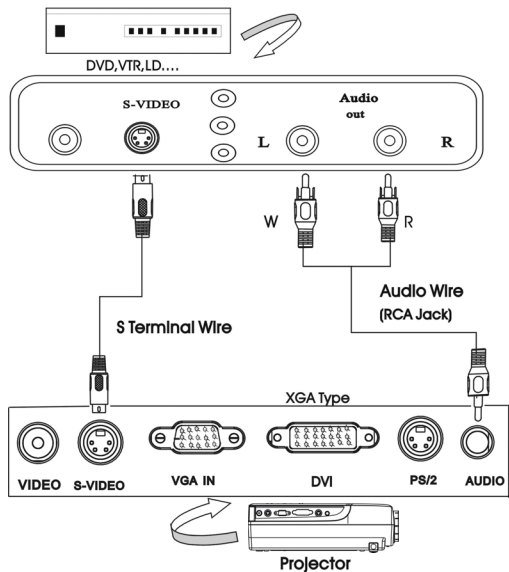


OSD (On Screen Display) Manu

Display/Exit OSD Menu

- Press MENU key to display the main menu.
- The contents of main menu are different according to various input signals which are shown as the following :
- Press EXIT key to Exit the main menu.

  Input signals of VGA or DVI (XGAType)

		Brightness	40	-		+
		Contrast	40	-		+
		H Position	50	-		+
		V Position	50	-		+
		Phase	30	-		+
		Clock	20	-		+
		AUTO	Press < > to select			
		1024 x 768 / 85 Hz				

Input signals of AV or S-VIDEO

 
		Brightness	40	-		+
		Contrast	40	-		+
		Saturation	50	-		+
		Tint	50	-		+
		Sharpness	50	-		+
		Video Format	Auto NTSC PAL SECAM			

Image Quality Adjustment

- After displaying main menu, press   key to move Bar to “Picture ”
- Press  key to enter sub menu.
- Press   key to move Bar to the option which needs to be adjusted .
- Press   key to set the value and press MENU key to return to main menu.
- Press EXIT key to exit the menu and save the setting.
- The “Adjust Option” is different according to various input signals which are shown as the following :

Options	The instruction
Brightness	To adjust the brightness value of the image .
Contrast	To adjust the contrast of image (higher value means high contrast)
H position	To adjust the horizontal position
V position	To adjust the vertical position
Phase	To adjust the Phase value of the image.
Clock	To adjust the Clock value of the image.
Auto Tune	To adjust the Phase and Clock Automatically.
Saturation	To adjust color saturation
Tint	To adjust the Tint
Sharpness	To adjust the Sharpness of the image.
Video	To select input signal as Auto 、NTSC 、PAL or SECAM format.

Advanced Setting Adjustment

- After displaying OSD menu, press key to move the Bar to “Advanced ”
- Press key to enter sub menu.
- Press key to move Bar to the option which needs to be adjusted .
- Press key to set the value and press MENU key to return to main menu.
- Press EXIT key to exit the menu and save the setting.
- The adjustment option are shown below :

Input signals of VGA or DVI (XGAType)

Picture	Color Temp.	Low	Middle	High	User
Advanced	User Red	50	-		+
D-Zoom	User Green	50	-		+
Options	User Blue	50	-		+
Audio	Keystone	50	-		+
PIP	Keystone Mode	Normal			Full height

Input signals of AV or S-VIDEO

Picture	Color Temp.	Low	Middle	High	User
Advanced	User Red	50	-		+
D-Zoom	User Green	50	-		+
Options	User Blue	50	-		+
Audio	Keystone	50	-		+
	Keystone Mode	Normal			Full height

Options	The instruction
Color Temp	To adjust color temperature of image to personal performance. (Normal temp value is Middle) For cool color, select higher Color Temperature, for warm color, select lower Color Temp.
Keystone	Compensating the trapezoid distorted images up to ± 15 degrees. (Normal value is 50)
Keystone Mode	To select to Normal or Full Height mode. Under Full Height mode, only the horizontal size of keystone will accompany keystone adjustment.

Advanced Scale Adjustment (Digital Zoom)

- After displaying OSD menu, press key to move the Bar to “Adv. Scale”.
- Press key to enter sub menu.
- Press key to move Bar to the option which needs to be adjusted.
- Press key to set the value and press MENU key to return to main menu.
- Press EXIT key to exit the menu and save the value.
- The options to be adjusted are shown as the following :

Input signals of VGA or DVI (XGAType)

 Picture	 Zoom	0	-		+
 Advanced	 H Offset	50	-		+
 D-Zoom	 V Offset	50	-		+
 Options	 Reset	Press < > to select			
 Audio	 Full Screen	16:9	4:3	Off	
 PIP					

Input signals of AV or S-VIDEO

Picture	Zoom	0	-		+
Advanced	H Offset	50	-		+
D-Zoom	V Offset	50	-		+
Options	Reset	Press < > to select			
Audio	Full Screen	16:9	4:3	Off	

Adjust options	The instruction
Zoom	Digital zoom
H offset	After zooming, display screen can be moved horizontally.
V offset	After zooming, display screen can be moved vertically
Full Screen	To adjust the image into full screen or 16:9 or 4:3

Options

- After display Main-menu , press key to move Bar to “Options ”
- Press key to enter sub-Menu.
- Press key to move Bar to the option which needs to be adjusted.
- Press key to set value and press MENU key to return to main menu.
- Press EXIT key to exit the menu and save the value.
- The option to be adjusted as the following :

Input signals of VGA or DVI (XGAType)

Picture	OSD	
Advanced	Translucent	On Off
D-Zoom	Language	Eng 繁體
Options	Projection	Desk
Audio	Auto Search	On Off
PIP	Info Lamptime	1:21
	Reset Timer	Press < > to reset
	Reset	Press < > to select

Input signals of AV or S-VIDEO

Picture	OSD	
Advanced	Translucent	On Off
D-Zoom	Language	Eng 繁體
Options	Projection	Desk
Audio	Auto Search	On Off
	Info Lamptime	1:21
	Reset Timer	Press < > to reset
	Reset	Press < > to select

Options	The instruction
OSD	To select OSD position on screen.
Translucent	To select OSD Translucent function for on or off.
Language	To select language for English 、French 、German 、Italian 、Esperanto 、簡體、繁體.
Projection	Press key to select Projection for Desk 、Ceiling 、Rear or Rear Ceiling.
Auto Search	To select Auto Input Signal Search for on or off.
Factory Reset	To return all parameters to factory default value
Lamp Timer	To show the accumulation of the working time for lamp module

Audio Adjustment

- After displaying main menu , press key to move Bar to “Audio ” .
- Press key to enter sub menu.
- Press key to move Bar to the option which is about adjusted.
- Press key to set the value and press MENU key to return to main menu.
- Press EXIT key to hide the menu and save the set value.
- The options to be adjusted are shown as the following :

Input signals of VGA or DVI (XGAType)




Input signals of AV or S-VIDEO



Adjust options	The instruction
Volume	To adjust the volume of speaker

PIP Adjustment

- After displaying main menu , press key to move Bar to “PIP ” .
- Press key to enter sub menu.
- Press key to move Bar to the option which is about adjusted.
- Press key to set the value and press MENU key to return to main menu.
- Press EXIT key to hide the menu and save the set value.
- The options to be adjusted are shown as the following :

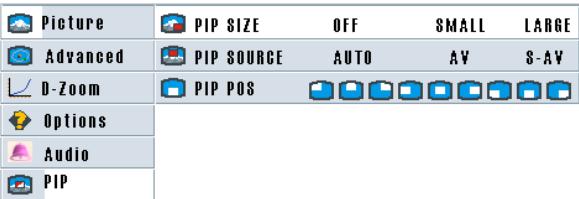

Adjust options	The instruction
PIP SIZE	To adjust the size of sub picture.
PIP SOURCE	To choose the signal source with AV or S-Video
PIP POS	To choose the position of sub picture

Maintenance

Handling of Abnormality

Abnormality of Indicators

- When Red indicator is on, it means the heat dissipation or fan is at fault, please contact with your dealer.
- If there is No indicator on, please check whether the power cord connect properly. If it still doesn't work, please contact with your dealer.

Abnormality of Lighting-up Lamp


- When the red indicator is flashing and orange indicator is on, it's abnormal and possibly due to damaged lamp or unstable voltage, just turn off Projector and restart again. If it still doesn't work, please contact with your dealer.

Cleaning the Projector

- Un-plug the power of projector before cleaning. Clean with a non-cotton dry cloth or with slight water and neutral detergent if necessary.

Cleaning of Air Filter


- Turn off the projector and un-plug the power.
- Use star type screwdriver to loosen the screw and take the filter out.
- Clean the filter
- If the filter is hard to clean and need to replace a new one, please contact with your dealer.
- When cleaning filter sponge, please use vacuum cleaner than water to avoid moisture entering the projector. We recommend you to clean Projector every 100 working hours.

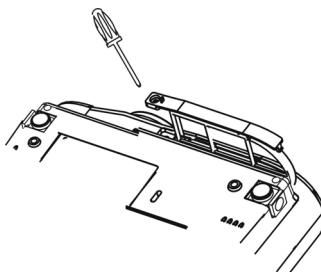



Replacing Main Lamp

Replacing Lamp Module

- When the red indicator is flashing and the lamp doesn't light up, the lamp source might be abnormal or burn out.
- When the projection image is too dark, or the projection image is unstable and flashing, please change the lamp.
- Please use specific lamp module provided by your local dealer.
- Turn off projector and unplug power cord.
- Loosen the 2 screws of the cap of lamp module.
- You need to find a special star type screwdriver.

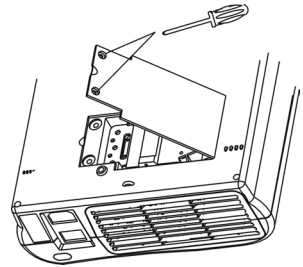

- When screws are loosened, take off the cap of lamp module.
- Loosen the 3 screws placed on the lamp module.
- Pull up the handle of the lamp module and pull the lamp module out of projector

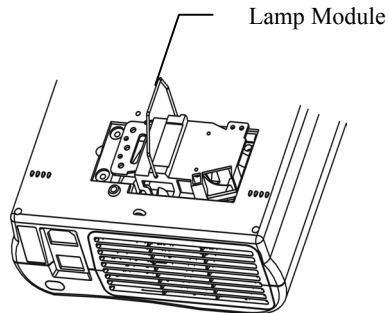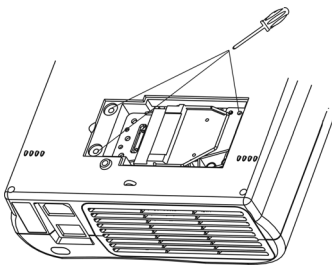

- Install the new lamp module provided by your dealer into the projector.
- Fasten the 3 screws of the lamp module.
- Install the cap of lamp module then fasten 2 screws of the cap.

Appendix

Compatible Modes

Resolution	V. Frequency	H. Frequency	Resolution	V. Frequency	H. Frequency
720 × 420	70Hz	31.5KHz	1152 × 864	60Hz	54.3KHz
640 × 350	70Hz	31.5KHz	1152 × 864	70Hz	63.9KHz
720 × 400	85Hz	37.9KHz	1152 × 864	70Hz	64KHz
640 × 350	85Hz	37.9KHz	1152 × 864	75Hz	67.5KHz
640 × 480	60Hz	31.5KHz	1152 × 864	85Hz	77.1KHz
640 × 480	67Hz	35KHz	1280 × 960	60Hz	60KHz
640 × 480	72Hz	37.9KHz	1280 × 960	75Hz	75.93KHz
640 × 480	75Hz	37.5KHz	1280 × 960	85Hz	85.93KHz
640 × 480	85Hz	43.3KHz	1280 × 1024	43Hz	46.6KHz
640 × 400	70Hz	31.5KHz	1280 × 1024	60Hz	64KHz
640 × 400	85Hz	37.9KHz	1280 × 1024	74Hz	78.8KHz
800 × 600	56Hz	35.2KHz	1280 × 1024	75Hz	79KHz
800 × 600	60Hz	37.9KHz	MAC-13LC	67Hz	35KHz
800 × 600	72Hz	48.1KHz	MAC-15	75Hz	68.7KHz
800 × 600	75Hz	46.9KHz	MAC-16	75Hz	49.1KHz
800 × 600	85Hz	53.7KHz	MAC-19	75Hz	60.2KHz
832 × 624	75Hz	49.7KHz	MAC-1960	60Hz	48.2KHz
1024 × 768	43Hz	35.5KHz			
1024 × 768	60Hz	48.4KHz			
1024 × 768	70Hz	56.5KHz			
1024 × 768	72Hz	57.8KHz			
1024 × 768	75Hz	60.0KHz			
1024 × 768	85Hz	68.7KHz			