



 
Multimedia Xperience

Pocket Projector



Quick guide


● Projector parts

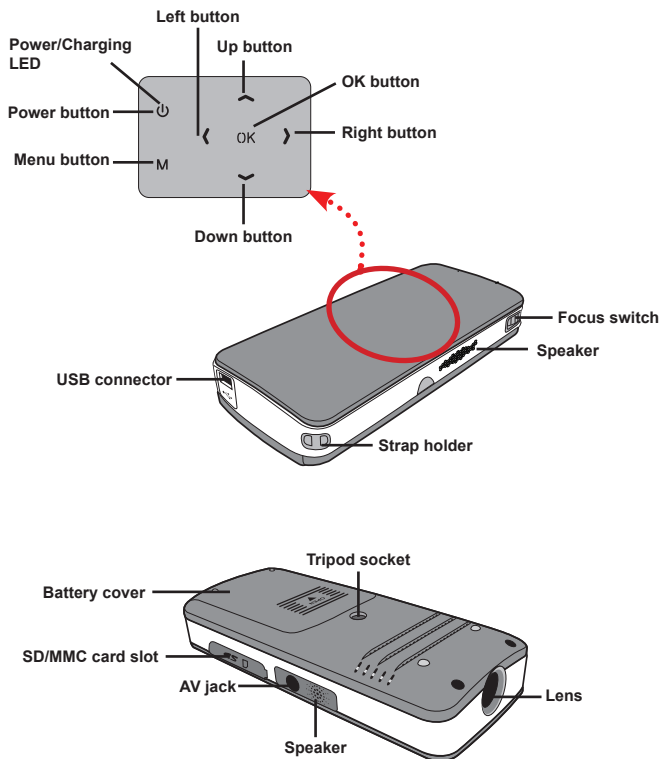

* Please refer to the E-manual for more detailed information.

● Installing the battery

1. Slide the battery cover open.
2. Place the included Li-Ion battery into the compartment. Note that the metallic contacts must be aligned with the contacts in the compartment.
3. After the battery is properly installed, replace the battery cover.

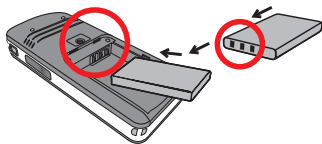

● Charging the battery

Please charge the battery at least 3 hours prior to its first use.

1. Connect the cable.
Connect one end of the supplied AC adapter to the USB port of the projector and the other end to a wall outlet.

OR


Connect one end of the supplied USB cable to the USB port of the projector and the other end to a powered PC. Make sure the projector is powered off.

2. The charging LED turns orange and the charge starts.
3. When the charging is interrupted or the battery pack is fully charged, the charging LED will turn green.



● Introduction to main menu

After turn on the projector, you will see "Welcome" screen first then main menu as below.

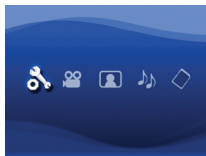


- **Settings:** This function allows users to set some preference settings such as **Language, Brightness, Contrast, Saturation, Slideshow Speed, Auto power off** and **Beep sound**.
- **Video:** This function allows users to select video file to project from screen.
- **Photo:** This function allows users to select JPEG image file to project from screen.
- **Music:** This function allows users to select MP3 files to play from the projector.
- **Memory:** This function allows users to check the available memory type and capacity and select it for target source for projection.

● Playing back Powerpoint/PDF files

When giving a presentation using PowerPoint/PDF documents, please save the PPT/PDF file into .jpeg format.

1. Execute PowerPoint/Acrobat program first.
2. Open the PPT/PDF file.
3. Launch "File" > "Save as" dialogue, then select "JPEG File Exchange Format" from "Save as type" drop-down list.
4. Rename the file if necessary:
The playback sequence is in the order of the first digit Arabic numerals, such as 1, 10, 100, 101, 11, then 2, 20, 21, and so on. To avoid playback order confusion, please rename the file 1 ~ 9 as 01 ~ 09, 100 as A100, etc.

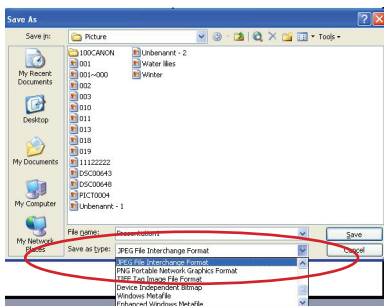

● Repeat playing video, still picture or music

The default setting is to play selected **video, still picture or music** once. If users want to repeat the **video, still picture or music (s)**, please do the following:

1. During the playing back of video, photo, or music, press **Menu** button for 2 seconds to show the function bar on the screen bottom.
2. Use the **Up/Down** button to select , , or .



(default setting): No repeat play



: Play the **video, still picture or music (s)** in the same folder




: Play the **video, still picture or music (s)** in the memory card or internal built-in memory.

● Playing back files in other devices

🔗 Connecting the projector to your media players

Steps of connecting projector with external player:

Before connecting your media player to projector, you need to have media player dedicated composite AV-out cable and projector AV cable ready.

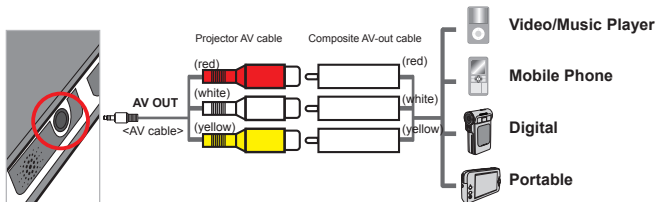

1. Connect Composite AV-out cable to media player.
2. Connect both AV cables (Yellow to Yellow, white to white and red to red).
3. Select "AV in" when you are asked to select "AV in" or "Audio out".
4. Now you can project image and audio from projector. You also can control the volume from control panel (**Up/Down** button).

● Managing the files in built-in memory or memory card from PC

Please follow the procedures below to manage files in either built-in memory or memory card.

1. Make sure the projector is powered off if the battery is installed.
2. Connect one end of the bundled USB cable to the USB port of the projector and the other end to a powered PC.
3. Turn on the projector:
Press and hold down the **Power** button for 4 seconds till you hear music.
4. A removable disk will appear in your computer.