

Brookstone®

Pocket Projector Slim



TABLE OF CONTENTS

Warnings and Cautions	2
FCC INFORMATION.	6
Location of Parts and Controls	7
Operation.	9
Troubleshooting	12
Specifications	13
Compatibility	14
One (1) Year Limited Warranty	18

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the adapter cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow adapter cord to touch hot surfaces. Wrap cord loosely around the unit when storing.

7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

WARNING!

THIS PRODUCT CONTAINS A RECHARGE- ABLE BATTERY

- Do not store this product in high temperatures, damp areas or in direct sunlight.
- Never disassemble the product.
- Never dispose of the product in fire or water, which may result in explosion and/or injury.
- Keep product out of reach of children.
- Do not touch product with damp hands.
- Dispose of the product properly.
- The product must not be discarded with ordinary household waste.
- Contact your local recycling center for proper disposal.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LOCATION OF PARTS AND CONTROLS


FRONT AND SIDES

1. Volume and Focus Adjustment
2. Mode Switch
3. Battery Indicator Lights
4. Speakers
5. Power Button

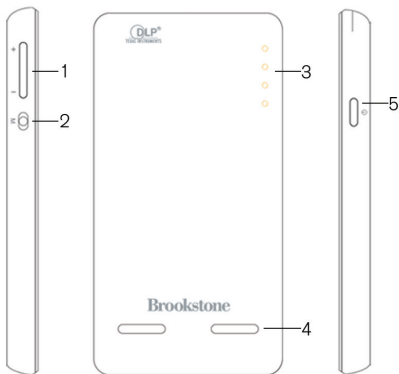

TOP AND BOTTOM

 6. Lens
7. USB Out for Device Charging
8. Micro USB Charging Interface
9. HDMI MHL In



OPERATION

CHARGING THE PROJECTOR

1. The projector is charged using the included Micro USB to USB cable.

IMPORTANT: Fully charge the Projector's internal battery before first use (approximately 4-5 hours).

The projector's approximate run time on battery power is 3.5 hours (when fully charged).

2. The projector has 4 indicator lights. The lights will flash in turn as the device charges. Device is fully charged when all 4 lights are lit and no longer flash.
3. To check the projector's battery, press the power button. The amount of battery remaining will be indicated by the number of indicator lights that are lit. For example, if only one light is lit the projector's battery is low. In this case, connect the power adapter and charge the projector promptly to avoid the automatic power off when the battery runs low.

ATTENTION: The projector may become warm during operation. This is a normal process of heat emission which will not impact the operation of the projector.

SETUP

1. Connect your device to the projector using the included HDMI to HDMI cable. Depending on your device (for example: notebook, smart phone or tablet) you may need to connect an adapter to the end of the HDMI cable.

NOTE: To use with an Apple device you will need an Apple Digital AV Adapter (purchased separately) to connect with the HDMI cable that is included in the box. For other devices, an adapter may also be required. Please contact the manufacturer or distributor of your device for more information and refer to the Compatibility section in this manual.

2. Press and hold the power button for approximately 5 seconds to start the projector.
3. Choose the media you would like to view from the menu on your device and play it as you normally would.
4. The projector can work at any time and any place! However, for the best quality, we suggest you find a light colored wall (preferably smooth and white) and place the Projector with its lens facing the location. The Projector can show media up to 60", just move the Projector towards and away from the wall to adjust the size of the picture. Dimming room lights will also add to viewing quality.

VOLUME

Move the mode switch to the lowest position. Pressing the top of the volume switch will increase volume, and pressing the bottom will decrease the volume.

FOCUS

Move the mode switch towards the top most position. Press focus adjustment switch toward the top or bottom to adjust the focus as needed. While adjusting, you will see a ↑ symbol or a ↓ symbol on the screen indicating the adjustment being made. When the screen indicates a ⤴ or ⤵, the projector has reached maximum level of adjustment.

CHARGING WITH THE PROJECTOR

Connect one end of USB cable (purchased separately) to a smart phone and plug the USB cable to the USB port on the projector. The screen of the smart phone will indicate the device is charging.

NOTE: The projector can charge smart phones but will not charge tablets

TROUBLESHOOTING

- Q. The projected image is fuzzy.
- A. Check that the surface you are projecting on is smooth. We recommend a smooth white surface for best results. Next, push the Mode switch to the upper most position and adjust the focus by using focus adjustment switch.
- Q. No signal - My device is connected but the projector is displaying "No signal."
- A. Check that the HDMI cable and any required adapters are securely plugged into your device and the projector. Also, try unplugging and then plug the cable back in.
- Q. My device is connected but the projector is not projecting.
- A. Please charge the battery of the projector (see the Charging the Projector section in this guide for more information) and check that the HDMI cable and any required adapters are securely plugged into your device and the projector.

SPECIFICATIONS

Native Resolution..... 640 x 360 (WVGA)

LED Lamp Brightness.... 25 Lumens

Contrast Ratio..... 1500:1

Screen Aspect Ratio..... 16:9

LED Lamp Life..... Approx 20,000 hours

Speakers..... 2 1-watt speakers built in

Power 3300mAh rechargeable
battery (approx 3.5 hours
fully charged)

COMPATIBILITY

◆ Included in the box

◇ Purchase separately



This symbol highlights devices that have the ability to mirror the on screen content from your device with the projector. Devices that do not support mirroring can still project utilizing applications that support video out. For example: Netflix™, Hulu®, and YouTube™ video services.

CABLES AND ADAPTERS INCLUDED IN THE BOX



Micros USB to USB Charging Cable



Micro USB to HDMI MHL Cable



HDMI® to HDMI Cable



5-Pin to 11-Pin Micro USB Adapter

APPLE® DEVICES



iPhone® 5
iPod touch® 4
iPad® Mini 1
iPad 4



◇ Lightning™ Digital AV Adapter
◆ HDMI to HDMI Cable



iPhone 4s
iPad 3
iPad 2

iPhone 4
iPod touch 3
iPod touch 2
iPad 1



◇ 30-Pin Digital AV Adapter
◆ HDMI to HDMI Cable

ANDROID™ DEVICES



Samsung Galaxy Note® II
Samsung Galaxy S® III
Samsung Galaxy S® 4



- ◆ 5-Pin to 11-Pin Micro USB Adapter
 - ◆ Micro USB to HDMI MHL Cable
-



HTC One®



- ◆ Micro USB to HDMI MHL Cable
-

WINDOWS® 8 DEVICES



Surface™



- ◇ Micro HDMI to HDMI Adapter
 - ◆ HDMI to HDMI Cable
-



ASUS VivoTab™



- ◇ Micro HDMI to HDMI Adapter
 - ◆ HDMI to HDMI Cable
-

BLACKBERRY® DEVICES



Blackberry Z10



◇ Micro HDMI to HDMI Adapter

◆ HDMI to HDMI Cable

LAPTOP AND DESKTOP COMPUTERS

Laptop & desktop computers that support HDMI are compatible with the projector.

NOTE: Depending on your configuration, you may need to update the video drivers and/or adjust your video out and resolution settings

Apple, iPhone, iPad, iPod, iPod Touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. Android is a trademark of Google Inc. Samsung, Galaxy, Galaxy S, and Note are trademarks of Samsung Electronics Co., Ltd. in the United States or other countries. The HTC and HTC One are the trademarks of HTC Corporation. ASUS and VivoTab are registered trademarks of ASUSTeK Computer. Windows and Surface are registered trademarks of Microsoft Corporation in the United States and other countries. Blackberry is a trademark of Research In Motion, registered and in the U.S. and countries around the world. DLP and the DLP logo re trademarks of Texas Instruments. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. MHL and the MHL logo are a trademark, registered trademark or service mark of MHL, LLC in the United States and/or other countries. Netflix is a registered trademark of Netflix. Hulu is a trademark of Hulu, LLC.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone

may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more
great ideas online

Brookstone®

842364

Brookstone.com | 1-800-846-3000
Merrimack, New Hampshire USA 03054