

Brookstone



Pocket Projector Pro

YOU ALWAYS PUT ON SUCH A SHOW

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS!

2

7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by cord or use cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

CONTENTS

Caution.....	2
Warning!.....	5
FCC Information.....	6
Location of Parts and Controls.....	8
Compatibility.....	10
Specifications.....	11
Charging the Battery.....	12
Operating the Projector.....	13
Setup.....	13
Powering Up and Viewing Media.....	14
Image Adjustments.....	15
Charging with the Projector.....	17
Troubleshooting.....	18

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the adapter cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow adapter cord to touch hot surfaces. Wrap cord loosely around the unit when storing.

3

WARNING!

THIS PRODUCT CONTAINS A RECHARGEABLE BATTERY

- Do not store this product in high temperatures, damp areas, or in direct sunlight.
- Never disassemble the product.
- Never dispose of the product in fire or water, which may result in explosion and/or injury.
- Keep product out of reach of children.
- Do not touch product with damp hands.
- Dispose of the product properly.
- The product must not be discarded with ordinary household waste.
- Contact your local recycling center for proper disposal.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

6

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

LOCATION OF PARTS AND CONTROLS

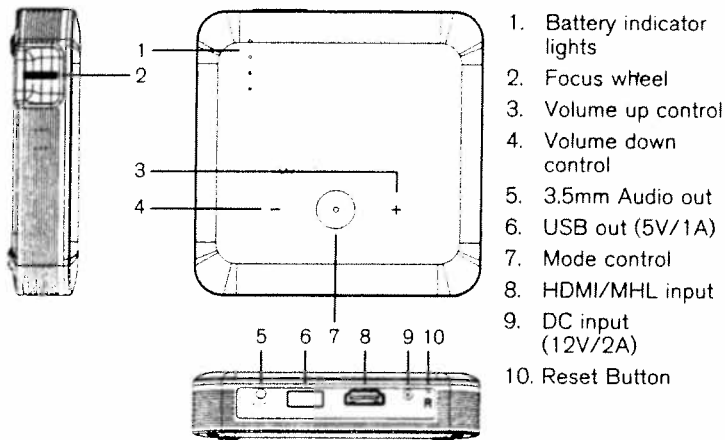

1. Battery indicator lights
2. Focus wheel
3. Volume up control
4. Volume down control
5. 3.5mm Audio out
6. USB out (5V/1A)
7. Mode control
8. HDMI/MHL input
9. DC input (12V/2A)
10. Reset Button

LOCATION OF PARTS AND CONTROLS

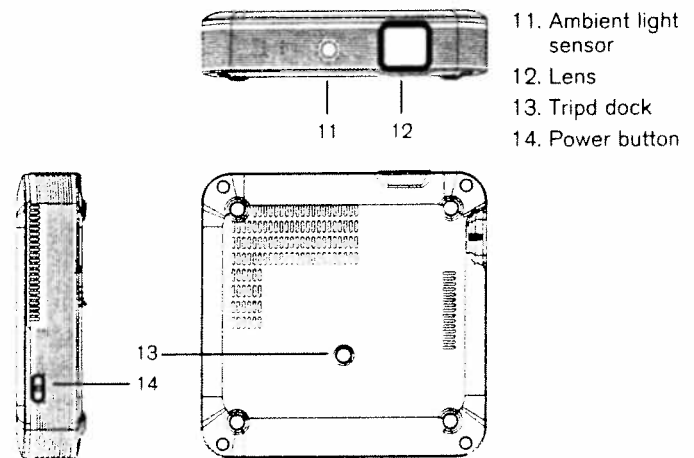

11. Ambient light sensor
12. Lens
13. Tripdock
14. Power button

8

COMPATIBILITY

YOUR DEVICE:	DO YOU NEED AN ADAPTER?
Apple® iPad®, iPhone® and iPod touch® devices	Yes – Apple Digital AV (sold separately)
Other smartphones, tablets	Micro HDMI ports requires Micro HDMI adapter (not included) and HDMI cable; Micro USB port requires MHL Cable (included); Samsung devices require MHL cable (included) and 5-to-11 pin adapter (included); Mini HDMI ports require adapter (sold separately)
Laptops	Full-size HDMI ports require no adapter; Mini HDMI ports require an adapter (sold separately)
Gaming console with HDMI port	No
Camera, camcorder	Micro USB ports require MHL Cable (included) Mini HDMI and Micro HDMI ports require adapters (sold separately)

SPECIFICATIONS

Product Dimensions	4" x 4" x 1"
Brightness	200 Lumens*
Lamp Life	LED lamp with up to 20,000 hours
Image Size	Up to 100"
Distance	3.5ft to 12ft
Throw Ratio	1.66
Contrast Ratio	400:1*
Native Resolution	1280 x 720 (720p)
Aspect Ratio	16:9
Built-in Speaker	2 1-watt speakers
Power	DC 12V/2A
Auto Keystone	+/- 40 degrees vertical keystone correction
Battery	Li-polymer, 5,000 mAh

*TI's DLP® IntelliBright™ technology dynamically adjusts the projector brightness range for each individual pixel based on image content and the ambient room light level.

CHARGING THE BATTERY

1. The built-in battery is charged using the included AC adapter.

IMPORTANT: Fully charge the battery before first use (approx. 4-5 hours).

2. The battery has 4 battery charge indicator lights. The lights will flash in turn as the device charges. The battery is fully charged when all 4 lights are lit and no longer flash.
3. Check the battery life by briefly pushing the power button. The indicator lights will illuminate indicating the amount of battery remaining (for example, if 3 lights illuminate, there is approximately 75% of the battery life remaining).

2

POWERING UP AND VIEWING MEDIA

IMPORTANT: Before you power on the projector, please be sure to check that there is nothing blocking the ambient light sensor on the front of the projector (the location of this sensor can be seen in Locations and Parts diagram on page 9). Blocking this sensor may impact the IntelliBright adjustments the projector makes which optimizes the projected image.

1. Power on the projector by pressing and holding the power button for 3 seconds.
2. Allow the projector 15 to 30 seconds to fully start up and make image adjustments.
 - When initially turned on, you will see the Brookstone startup screen. Following that screen, the screen may flicker briefly as DLP IntelliBright technology built into the projector makes adjustments according to the ambient light in your environment.

14

ADJUSTING INTELLIBRIGHT

WHAT IS INTELLIBRIGHT? TI's DLP® IntelliBright™ technology dynamically adjusts the projector brightness range for each individual pixel based on image content and the ambient room light level.

When the projector starts up, it defaults to normal IntelliBright mode which optimizes the projected image settings for the room environment. If you wish to increase the IntelliBright adjustment, press the mode key twice on the projector to switch to vivid mode.

OPERATING THE PROJECTOR

SETUP

1. The projector can be powered using the included AC adapter or the built-in battery.
 - To power the projector with AC power, connect the AC adapter to the projector's DC input and plug the other end into an outlet. Once connected, the battery indicator lights will illuminate on the projector showing the amount of battery power remaining.
 - To power the projector with the built-in battery, simply turn the projector on. To check the remaining battery life of the projector press the power button briefly.

IMPORTANT: Fully charge the battery before first use (approx. 4-5 hours).

2. Connect the included HDMI cable to the HDMI port on the projector and the other end to your device.

NOTE: Some devices may require an adapter to connect to your device.

3. If desired, connect a speaker to the 3.5mm audio out jack. If no external speaker is connected, the projector's 2 internal 1-watt speakers will be used for audio.

13

NOTE: After syncing with the projector you may see your device's screen being mirrored by the projector. Some devices may not have this ability, but they can still be used with the projector to project videos, photo slide shows, and some app content (this functionality is app dependent).

3. Choose the media you would like to view from the menu on your device and play as you normally would.

IMAGE ADJUSTMENTS

ADJUSTING THE FOCUS

Simply roll the focus wheel control forwards and backwards to fine-tune the projected image.

ADJUSTING THE VERTICAL KEYSTONE

Press the mode selection key and the projector will automatically adjust the display screen to the best condition (+/- 40 degrees automatic vertical keystone correction).

ADJUSTING THE VOLUME

Touch the mode control area to activate the volume controls. Use the volume up and volume down control areas to adjust to the preferred volume level.

15

CHARGING WITH THE PROJECTOR

The projector has one USB out jack which can be utilized to charge a variety of smart phones.

- Connect your device to the fully-charged projector with a USB cable (not included).
- Your device's screen will let you know your device is charging and when it's fully charged.

TROUBLESHOOTING

- Q. The projected image is blurry.
 - A. Adjust the focus wheel on the projector to fine-tune the picture. Also check that the surface you are projecting on is smooth.
- Q. The projector is not projecting.
 - A. Here are several things to check if your projector is not projecting:
 - If on battery power, check the battery life remaining by pressing the power button. If battery power is low, plug into AC power.
 - If on AC power, check that the AC power is plugged into the correct port on the projector and the AC adapter is securely into a powered outlet.
 - Check that you are using any necessary adapters with your device. If an adapter is required, power down the projector, add the adapter, and then turn the projector back on.

NOTE: If your device does not have the ability to mirror with the projector, you must launch an app with video out support, play a slide show on your device, or play a video on your device to see a projected image.

18

LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser.

19

but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

20

21