

SIM2 Multimedia

SIRIO

User Guide



Contents

3	Important information
	About this User Guide
	Safety
	3D Content
	Environment
	Notice
7	Chapter 1: Introduction
	Key Features and Benefits
	System Components
	Optional Accessories
9	Chapter 2: Overview
	Remote Control
	Projector Keypad
	Connections
	3D RF Emitter
	3D Glasses
13	Chapter 3: Installation
	Location
	Installing the Projection Lens
	Mounting
	Connections
	Switching On and Off
19	Chapter 4: Operation
	Viewing 3D Content
	3D Menu
	Input Menu
	Main Menu
	Picture
	Image
	Setup
	Menu
	Memories
	Info
	Quick Menus
	Messages
36	Chapter 5: Troubleshooting
38	Chapter 6: Specifications
40	Chapter 7: Projection Distances
41	Chapter 8: Dimensions

1 Important information

About this User Guide

This User Guide describes how to set up and operate the following projector:

•SIRIO

Information contained in this User Guide may be updated from time to time due to product improvements and customer feedback. Visit www.sim2.com to find the latest version of this document.

This document contains proprietary information protected by copyright. All rights are reserved.

All trademarks and registered trademarks are the property of their respective owners.

Safety



To reduce the risk of electrocution, disconnect the power cord on the rear panel before removing the top cover of the projector. For technical service refer to trained personnel authorized by the manufacturer.

If the lamp suddenly explodes with a loud bang, turn off the projector immediately and air the room thoroughly. Do not attempt to restart the projector and do attempt to replace the bulb: contact your local service center.

Read this guide

Read all chapters of this guide carefully before switching on the projector. This guide provides basic instructions for operating the SIRIO projector. Installation, preliminary adjustments and procedures that necessitate the removal of the top cover and contact with electrical components must be performed by authorized, trained technicians. To ensure safe operation and long term reliability use only the power cords supplied by the manufacturer. Observe all warnings and precautions. Keep this guide for future consultation.

Do not touch internal parts of the projector

Inside the housing there are electrical parts carrying dangerously high voltages and parts operating at high temperature. Never open the housing. Entrust all servicing and repair work to a SIM2 Authorized Service Center. Opening the housing voids the warranty.

Disconnect the appliance from the power supply

The device that disconnects the projector from the mains is the power plug. Ensure that the power cord plugs and the electrical outlets are easily accessible during installation operations. Pull the plug, not the cord, to disconnect the projector from the mains. Use only the specified power supply. Connect the projector to a mains electrical supply with rated voltage of between 100-240 V AC, 50/60 Hz and equipped with a protective earth connection. If you are not sure of your domestic mains rating,

contact an electrician. Take care to avoid overloading the power socket and any extension leads.

Switching the projector off

Pay attention to the switch off procedure for the projector. The projector must always be brought back to the standby state to allow the projector to carry out the cooling procedure. Should this not happen, for example due to a power cut, the projector may enter a state of protection that leads to switch-on being blocked. This block will last until the internal components of the projector have completely cooled down.

Be careful with cables

Make sure cables are routed so that people are not impeded or become a trip hazard. Keep all cables away from children. Install the projector as close to the wall socket as possible. Avoid stepping on power cords, make certain they do not become tangled, and never jerk or tug them; do not expose them to sources of heat, and make sure they do not become knotted or crimped. If the power cords become damaged, stop using the projector and request the assistance of an authorized technician.

Disconnect the projector from the mains power during electrical storms and when not in use

To prevent damage from lightning strikes in the vicinity, disconnect the projector during storms or when the projector is going to be left unused for a long time.

Avoid contact with liquids and exposure to damp

Do not use the projector near water (sinks, tubs and so on); do not place objects containing liquids on or near the projector and do not expose it to rain, humidity, drops of water or sprays; do not use water or liquid detergent to clean it.

Place the projector on a stable surface

Place the projector on a stable surface or use a suitable ceiling mounting bracket. Never place the projector on its side or rear, on the lens or top panel.

Do not allow the projector to overheat

To prevent overheating, allow a free space of at least 0.25 m (10 in.) on the left, right and rear sides of the projector. Do not obstruct the ventilation slots. Do not place the projector near heat sources such as heaters, radiators or other devices (including amplifiers) that generate heat. Do not place the projector in an area where there is insufficient space (shelving units, bookshelves and so on) and in general avoid placing it in poorly ventilated areas as this may prevent sufficient cooling and significantly reduce lamp life.

Never look directly at the projection lamp

Never look directly into the lens when the lamp is on as the intense light may damage your eyes. Take particular care that children cannot do so.

Installing the lens

Remove the lens plug from the lens opening in the projector before installing the lens. Retain the lens plug to protect the optical components from dust and debris during transport (see page 14).

Take special care regarding movement of the lens

Do not place objects in the slots on the side of the lens and also ensure that vertical

and horizontal lens movements are not impeded by external objects.

Do not insert objects through the openings in the projector

Make sure that no objects are inserted inside the projector. If this should occur, disconnect the projector from the power supply immediately and call an authorized technician.

Power saving

We advise disconnecting the projector from the power supply when not in use. In this way you will achieve considerable power savings while at the same time protecting internal electrical parts from wear.

3D Content

Discomfort (such as eye strain, headaches, motion sickness, nausea, dizziness, disorientation) may be experienced while watching 3D content. In this case, stop watching and consult a doctor if symptoms are severe.

Consult a doctor before allowing young children (especially those under six years old) to watch 3D content as their visual system is still under development.

Monitor children (including teenagers) watching 3D content, as they are more at risk of experiencing discomfort and less inclined to report symptoms.

Individuals who may be susceptible to epileptic seizures or strokes (on the basis of personal and family history) should consult a doctor before watching 3D content.

All viewers should take regular breaks from watching 3D content. Length and frequency of these breaks may vary from person to person.

Environment

This product contains materials derived from natural resources during its manufacture. It may contain materials that constitute a health and environmental hazard. To prevent harmful materials from being released into the environment and to promote the use of natural materials, SIM2 provides the following information regarding the disposal and recycling of the product.

Waste electrical and electronic materials (WEEE) should never be disposed of in normal urban waste disposal facilities.



The label on the product, shown here, indicating a canceled garbage can, is intended to remind you that the product requires special handling at the end of its service life. Materials such as glass, plastic and some chemical compounds are recoverable and can be recycled for reuse.

Observe the following instructions:

- When you no longer wish to use your electrical and electronic equipment, take it to your local waste disposal facility for recycling.
- You may return your old equipment to your SIM2 Authorized Dealer free of charge when you buy a new product that is equivalent or has the same functions as the old one. Contact SIM2 to find your local dealer.

- If you need more information regarding recycling, reuse and product exchanges, contact SIM2 customer service.

Lastly we suggest further measures to safeguard the environment, such as recycling of internal and external packaging (including that used for shipping) in which the product was delivered. With your help, we can reduce the amount of environmental resources required to make electric and electronic equipment, reduce the use of waste tips for used equipment and, in general, improve our quality of life by making sure that hazardous materials are correctly scrapped. Incorrect treatment of the product at the end of its service life and failure to follow the above disposal instructions are punishable under local legislation.

Product disposal



The lamp inside this projector contains mercury and may be subject to special disposal or recycle regulations. Dispose or recycle in accordance with local laws. For more information contact the Electronic Industries Alliance at www.eiae.org or check www.lamprecycle.org

Notice

The appliance has been subjected to exhaustive operating tests by SIM2 to guarantee the highest quality. The projector bulb life should thus initially be around 30-60 hours. In addition to the customary checks, the Quality Control department also runs additional statistical tests before shipment. In such cases, the packaging may show signs of having been opened, and the hours of lamp operation may prove to be higher than those normally shown when only standard tests are performed.

As the optical system of the SIRIO is extremely compact and has the purpose of developing very high brightness and contrast, it is possible that a small quantity of light is visible outside of the projection area and will vary depending on the type of lens used and the zoom and shift setup. This characteristic of the optical system is to be deemed as normal. In order to reduce this effect SIM2 recommends that the area surrounding the projection screen is as dark as possible.

1 Introduction



Designed for the most demanding home entertainment system, SIRIO brings a balanced approach to high brightness projection, with a quality of picture that rivals that of the best projectors in its category. Engineered to be used with large screen sizes or in ambient light room conditions, where high light output is a necessity, SIRIO uses light-tuned optical elements to maximize light output (up to 6,000 ANSI lumens) from its dual 350W lamps. This is a star performer that has the power and clarity to satisfy the most demanding viewer (whether watching movies or playing video games), as well as the ability to deliver bright, contrast-rich images in real world lighting conditions. SIM2 has, in the SIRIO, created a 3D active single-chip DLP®-based projector without the compromises that are usually found in high brightness projectors, where high light output comes at the cost of some important features. SIRIO has a balanced delivery of both high brightness and healthy contrast.

The SIRIO has a comprehensive choice of connection options on-board an RJ-45 connector (Ethernet or LAN) and a USB port hosting a dedicated USB-Wireless adapter.

To aid calibration SIM2's Live Color Calibration software enables complete control over:

- primary, secondary and white point color coordinates
- gamma tables

allowing calibration experts to accurately calibrate the final image via a user-friendly application for Windows-based computers.

Key Features and Benefits

- high picture quality: SIM2 renowned image processing and the latest 0.65 in. 1080p DMD from Texas Instruments
- precision optics: compact die-cast light engine with precision glass optics and motorized zoom, focus and lens shift
- artifact-free fast-action images: SIM2 PureMotion processing

- high resolution: actual full HD 3D images, without blur and ghosting
- comfortable 3D viewing: high brightness ghost-free sharp images
- immersive 3D effect: large screen sizes thanks to high brightness images
- 3D wide viewing angle: stereo separation independent from viewing angles
- screen flexibility: no constraints in the choice of the screen material
- compatibility: no need of dedicated sources and preprocessing for 3D viewing
- longer lamp life: affordable and reliable P-VIP lamps

System Components

Your SIRIO DLP projector ships with the following items:

- 1 x backlit remote control unit (with four AAA/LR03 batteries)
- 3 x AC power cords (US, EU and UK), 2 m (6.6 ft.) long
- 3 x jacks for 12 V output connectors
- 1 x User guide (this document)
- 1 x Lens M2 (standard option)


If any items are missing or damaged, contact your SIM2 Authorized Dealer as soon as possible. Keep the original packaging in case anything has to be shipped.

Optional Accessories

- Projector ceiling bracket
- PANAMORPH Anamorphic lens systems (static or motorized)
- ISCO Anamorphic lens systems (static or motorized)
- Fixed Lens : LENS M0 FIXED LENS M0 (0,77)
- Zoom Lenses:
 - LENS M1 LENS ZOOM M1 (1.21 – 1.45)
 - LENS M2 LENS ZOOM M2 (1.45 – 1.94)
 - LENS M3 LENS ZOOM M3 (1.94 – 3,67)
 - LENS M4 LENS ZOOM M4 (3.67 – 6.98)
- VISUSRF-BOX (8 SIM2 Visus 3D RF glasses)
- VISUSRF-SYSTEM (7 SIM2 Visus 3D RF glasses and 1 RF emitter for SIM2 Visus 3D RF glasses)
- VISUSRF-SYSTEM-ACC (4 SIM2 Visus 3D RF glasses and 1 RF emitter for SIM2 Visus 3D RF glasses)

2 Overview

Remote Control

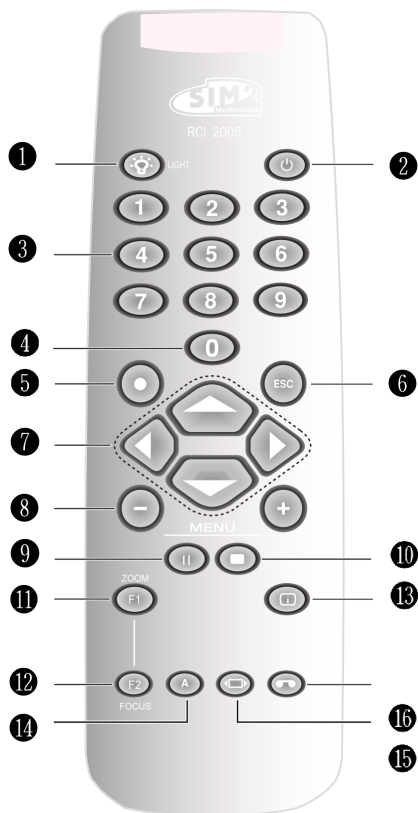

- | | |
|----|---|
| 1 | Turn backlight on for about 5 seconds |
| 2 | Turns the projector off |
| 3 | 1-9 Select inputs and turn the projector on |
| 4 | 0 Enters OSD Input menu and turns the projector on |
| 5 | OK enters submenus, confirms actions |
| 6 | ESC Exits OSD |
| 7 | ▲ Select menu items, adjust settings or cycle through the test patterns |
| 8 | ◀ |
| 9 | ▶ |
| 10 | ▼ |
| 11 | MENU Enter OSD Main menu and select the desired section, each press of the key selects the next tab in the menu |
| 12 | + / - |
| 13 | 3D enters 3D menu |
| 14 | Memory enters Memories menu |
| 15 | Perform user-defined actions (default assignments are: F1 = Zoom, F2 = Focus) |
| 16 | F1, F2 |
| 17 | Info displays projector Info |
| 18 | A Auto performs Auto Adjustment |
| 19 | Aspect enters Aspect Quick menu |
| 20 | Not used |

Custom Remotes

You can use your own IR remote control to control your SIRIO projector.

- If you are using a remote control with learning capabilities, use the projector remote control to teach the commands to your remote.
- If you are using a programmable remote control, the setup software probably allows importing of Pronto Hex codes. See *SIM2 SIRIO IR Control* for a list of all the projector codes in Pronto Hex format, including a number of discrete codes for:
 - Aspects
 - Memories
 - 3D Controls (3D Mode and Input Formats)

Operation

The SIRIO projector has two IR receivers, one on the front and one on the back of the unit. The operative range of the remote control is approximately 10 m (33 ft.). Make sure that there is nothing obstructing the infrared beam between the remote control and the IR receiver you are pointing to. You can point the remote control towards the screen, as the IR beam is reflected by the screen towards front IR receiver of the projector. In this case the effective range of the remote control may be smaller than declared.

Batteries


To install batteries in the remote control:

- 1. Open the battery cover.
- 2. Insert four AAA (LR03) batteries making sure the polarities match the + marks inside the battery compartment.
- 3. Replace the cover.

Replace the batteries with new ones when the operating range of the remote control decreases. Dispose of used batteries according to local regulations. Make sure you do not mix old and new batteries or different types of batteries.


Warning: If you will not use the remote control for a long time, remove the batteries to avoid battery leakage.

Projector Keypad

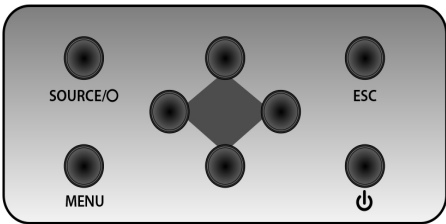

	turns the projector on or off
	select menu items, adjust settings or switch test patterns
MENU	enters OSD Main menu and selects the desired section
ESC	exits OSD
SOURCE/O	enters OSD Input menu/selects a menu item

Connections

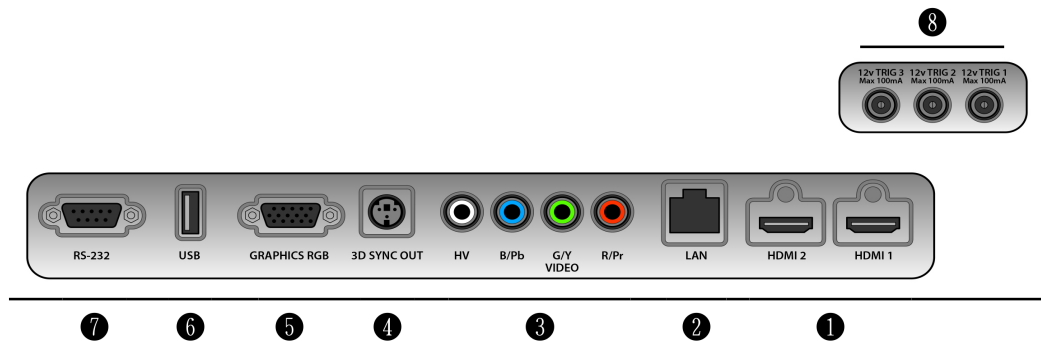

Inputs	① HDMI 1 HDMI 2	Accept both HDMI and DVI digital video inputs (1.4a)
	② LAN	RJ-45 Networking Connector
	③ Components/RGB-HV	Four RCA connectors. They accept both standard and high-definition component (YPrPb) and RGB-HV signals. Also used as RGB input for SCART RGBS signals.
	Video	Green RCA connector. Accepts composite video signals. Also used as composite sync input for SCART RGBS signals.
	⑤ Graphics RGB	One D-Sub 15-pin female connector. Accepts component or RGB high-definition signals.
Control/Service	⑥ USB	USB 1.1 (type A) port for serial commands and firmware upgrade.
	⑦ RS-232	RS232 (female D-Sub 9-pin) port for serial commands and firmware upgrade.
Outputs	⑧ TRIG 1	12 V 100 mA max output, for motorized screen control. Activates when the projector is switched on.
	TRIG 2	12 V 100 mA max output, for motorized screen masking systems control. See “Screen” on page 29.
	TRIG 3	12 V 100 mA max output, for motorized anamorphic lens position control. See “Anamorphic Lens” on page 29.
	④ 3D Sync OUT	VESA DIN-3 connector for 3D RF Emitter cable.

3D RF Emitter


The 3D RF emitter is designed to be placed near the projector and aimed at the screen. It receives the 3D sync signal from the projector and emits RF pulses that reach the 3D glasses RF receiver.

The emitter does not require a battery.

Note: The emitter emits sync pulses only when the projector displays 3D content.

3D Glasses

When displaying 3D content, the projector alternately displays one image for the left eye and one image for the right eye in rapid succession. The 3D glasses turn on and off their lenses, in sync with the projector, so that each eye receives exactly the image intended for it. The sync is possible thanks to the RF pulses received by the glasses from the 3D RF emitter.

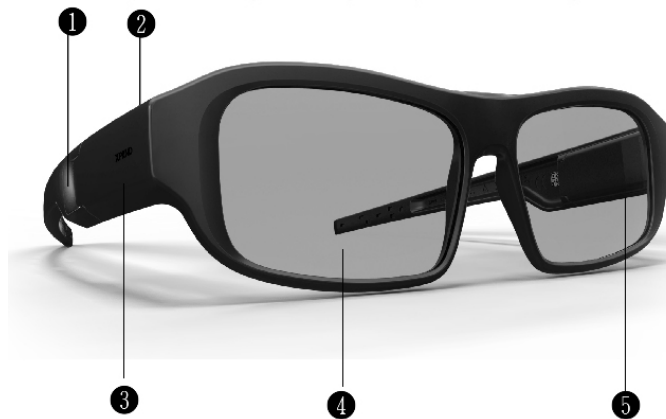

①	Button	Button for ON and OFF
②	LED	Indicating glasses status
③	Micro USB port	To charge the glasses
④	Lens	Liquid crystal shutter
⑤	RF Receiver	Receive RF signals from 3D Emitter

3 Installation

This section provides instructions for the installation of the SIRIO projector.

Important: Installation procedures should be performed by a qualified AV system specialist.

Location

When installing the SIRIO projector, take the following considerations into account.

Installation Type

Select the installation type that best suits your needs:

- front or rear projection
- floor or ceiling mount

Lens Type

Choose the desired distance from the screen and select the lens type (M0, M1, M2, M3, M4) that determines the desired screen size (see “Projections Distances” on page 42).

Cooling

Make sure that the planned location for the projector has adequate ventilation. Check that room temperature is below 35° C and that the projector is away from heating vents. Ensure a minimum 0.25 m (10 in.) clearance on the left, right and rear sides of the projector.

Power Outlets

Verify that the powers outlets are grounded and preferably shielded from power surges and fluctuations. SIRIO power supply operates on any nominal line voltage between 100-240 V AC, 50-60 Hz.

Cables

Check planned cable lengths for video and control cables and make sure these lengths do not exceed specifications.

Ambient Light

Avoid or minimize light sources directed at the screen to preserve the quality of the projected image.


Installing the Projection Lens

Before installing or replacing the lens, be sure that power is switched off and power cord is disconnected from the projector.

Procedure


Unscrew the 2 screws and lift up the plastic lens door.

Unscrew the 2 screws and lift up the metallic lens door.

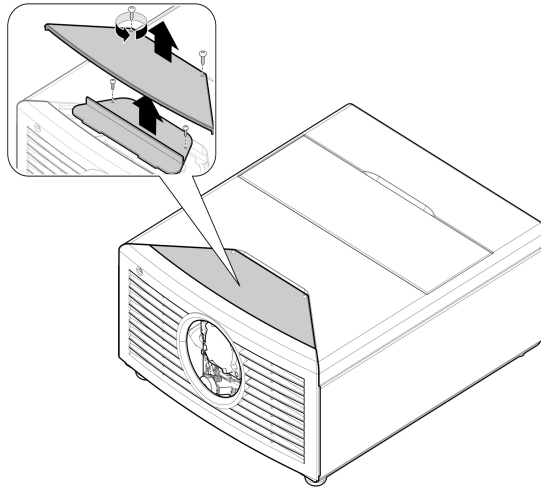


Pull the level up to release the lock (1)

Remove the lens cap (2)

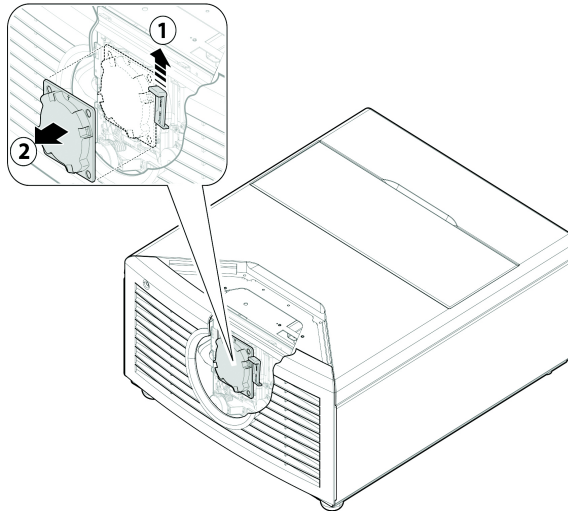


Install the lens into position (1)

Push the release lever down to lock the lens in place (2)

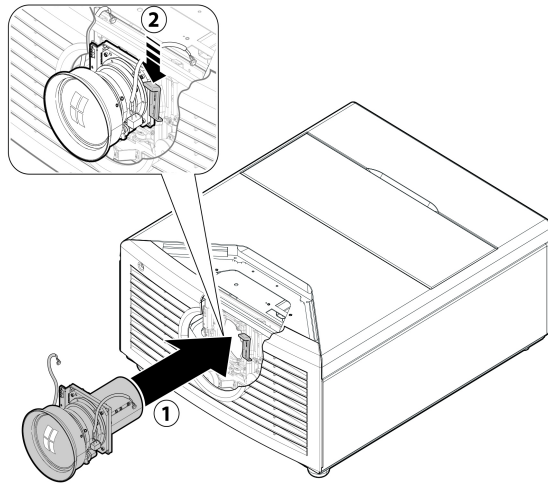

Connect cables as shown on picture.

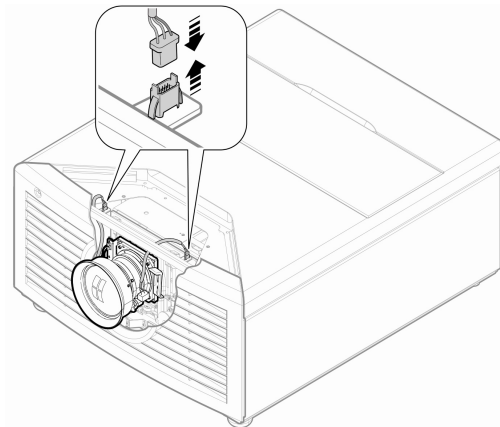

To replace the lens, repeat the above steps in opposite sequence.
Attempting to remove the lens without lens centering may cause damage to the lens assembly.



When carrying or moving the projector, do not handle by the lens. This may damage the lens, the chassis or other mechanical parts inside the projector. For the lens centering refer to “Projection Lens” on page 31.

Mounting

The projector can be Floor mounted (upright) or Ceiling mounted (inverted). Choose the method that best suits your installation.

Important: The projection lens is centered to the chassis. Make sure the centerline of the lens is centered horizontally to the center of the screen before installing.

Floor Mounting

Position the projector on a secure and flat surface (such as a table or a shelf). Adjust front feet at the bottom of the projector until the projector is level on all sides.

Ceiling Mounting

Invert the projector and suspend it from the ceiling using a specific bracket.

- Attach bracket by using 4 x M8 screws not exceeding 16 mm in length



For ceiling mounting use only SIM2-approved ceiling brackets and adhere to the installation instructions and safety guidelines provided with the bracket. Do not over-tighten the screws.


Orientation

By default, the SIRIO is configured for a Front installation (projector installed upright and in front of the screen). If the projector is installed behind the screen or inverted, you can use the image orientation function of the projector (see “Orientation” on page 31)

Vertical Lens Shift

Ideally, the projector should be positioned perpendicular to the screen and in such a way that:

- the lens center and screen center are aligned with each other
- the projected image fills the screen perfectly

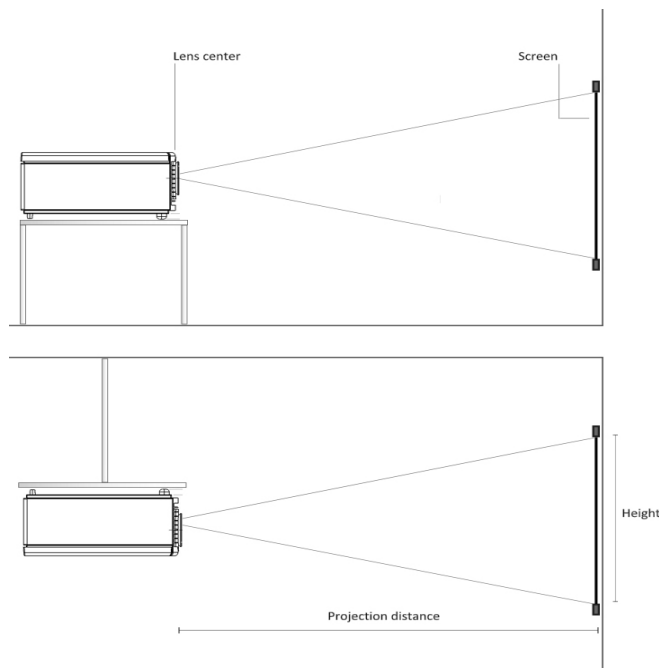

If it is not possible to position the projector perpendicular to the projection screen (so that the lens center and screen center are aligned with each other) you can use the motorized vertical shift (see page 31) to shift the projected image vertically. The SIRIO provides up to 60% of vertical lens shift up. For example, with a 16:9 150 in. diagonal size screen, you can shift the image up to 0.93 m (36.6 in.) above the screen center (see “Projection Distances” on page 42).

Keystone

If the projector is ceiling-mounted and the screen is lower than the projector, you may need to tilt the projector by adjusting the ceiling mount. If you do so:

- the top and bottom borders of the image will be unequal in length
- the sides of the image will be inclined

If the tilt is not excessive, you can use the Keystone function of the projector to correct the image shape. See “Keystone” on page 31.

Note: Keystone correction may cause artifacts in the image and may not be available when displaying specific 3D content (see Table 4.2 on page 24).

Zoom and Focus

The SIRIO provides motorized Zoom and Focus controls. You can access these adjustments through the remote control directly:

- F1** key for optical Zoom
- F2** key for Focus

See “F1-F2 Keys” on page 33 for details.

Connections

Proceed as follows to connect the SIRIO to video sources, control devices, screen control systems, 3D sync emitter and AC power.

When connecting your equipment:

- turn off all equipment before making any connections
- use the correct signal cables for each source
- make sure cables are routed so that people are not impeded or become a trip hazard
- ensure that the cables are securely connected (tighten the thumbscrews on connectors that have them)

Video

Often the sources (Blu-ray Players, DVD Players, Set Top Boxes, Game Consoles and so on) have several outputs. Choose HDMI whenever possible.

- HDMI** The major benefits of this signal type are:
 - best image quality, because the signal is carried in the digital domain throughout the entire signal path
 - highest available resolution, because video sources can deliver full resolution content via HDMI only
 - availability of 3D content, because most 3D compatible sources deliver 3D content

from HDMI only

- optimization of several image parameters (2D/3D content, color space, aspect, signal range, over scan), thanks to auxiliary information (AVI infoframe) sent by the source device together with the signal.

If your source has dual HDMI outputs, we would recommend direct connection to the projector from one of the HDMI connections and the second HDMI output to the input of an appropriate AV receiver/processor for audio.

Sources with a DVI-D output can be connected to the HDMI input of the projector using a suitable DVI-D to HDMI cable. In this case no auxiliary information is sent from the source to the projector.

Note: HDMI uses a code known as HDCP (High-bandwidth Digital Copy Protection), which protects the recorded supports from being copied illegally. The connection between the source and display require that the two devices perform a handshake and exchange code keys before being able to display an image. The InstaPort technology allows a simultaneous pre-authentication of every attached device at the same it is connected, reducing drastically the time required for HDMI source switching. For this reason you may note a slight delay before the image appears on the screen, but it is perfectly normal.

•**Graphics RGB** Input for Personal Computer and other sources that outputs RGB or YPrPb signals. These sources must be able to provide separate H/V sync or composite H+V sync.

•**RGB/YPrPb** Input for DVD Players, Set Top Boxes and other sources that output one of the following signals:

- Component (YPrPb)
- RGB with composite sync on green (RGsB)
- RGB with HV composite sync

RGB connectors also provides RGB input for SCART RGBS sources.

•**Video** This is the the input for composite video sources (such as VCR or analog camcorders). This connector is also the composite sync input for SCART RGBS sources. See “RGB/YPrPb” above.

Control

You can connect the SIRIO projector to a Personal Computer or a control system through one of the following methods:

- RS-232 port, using a standard 9-pin straight serial cable
- RS-232 port, using a USB to serial converter cable. In this case, installation of a device driver provided by the cable manufacturer may be required
- USB port, using a USB Type A cable connector. In this case, installation of a device driver provided by SIM2 may be required – ask your SIM2 Authorized Dealer

Note: RS-232 communications are limited to 15 m (50 ft.), whereas USB are limited to 5 m (16 ft.).

Triggers

Some Home Theater devices can be controlled through a 12 V signal. The projector can output three 12 V (100 mA max) signals:

- TRIG1 for motorized screens control

•TRIG2 and TRIG3 are for motorized screen masks and anamorphic lens motors control. See “Screen” and “Anamorphic Lens” on page 29 for instructions on how to do configure them from OSD

Note: Three jack adapters are shipped with the projector.

3D RF Emitter

The RF emitter sends the RF pulses that sync the 3D glasses. Proceed as follows to install the emitter:

- 1.Place the emitter near the projector on a secure surface or use an appropriate mount kit. For maximum range emitter should not be placed on the ground/floor but should be placed at least 10 cm above ground (like on a shelf).
- 2.Connect the emitter connector to the corresponding **3D Sync Out** output connector in the projector.
- 3.Once the emitter is connected to the projector, please make sure that the projector is in 3D mode. Check the X sign on the emitter; the red light should be on, indicating that the emitter is functioning.

3D Glasses

Proximity Association with 3D RF emitter

The following procedure has to be done every time the glasses are introduced to new 3D RF emitter. During the proximity association, 3D glasses shall be located within 1 m from 3D RF emitter.

Switch on the glasses (1 short press on the button). LED will change from off to bright, indicating glasses power on.

Press button for minimum of 1 second.

After 1 second, LED will start to blink with a rate of 1 blink per 2 second.

Release the button.

Successful proximity association is indicated with 6 short LED blinks.

If glasses could not proximity associate LED will change from bright to off and glasses will go in power off state.

Connecting glasses to 3D RF emitter

Once glasses are associated with the emitter, they will automatically connect to that emitter every time they are switched on. If during the operation glasses lost the connection to the emitter, they will automatically try to reconnect to that emitter (LED is blinking with a rate of 1 blink per 2 seconds). If glasses cannot successfully reconnect to the emitter within 60 seconds, LED will change from bright to off and glasses will automatically go in power off state.

Indicating the battery state

If LED flashes every couple of seconds during the operation, battery level is low.

Charging is indicated with lit LED.

Charging the battery

The glasses are shipped with the micro USB to USB Type A cable. To charge the glasses battery, plug the micro USB cable in a computer or other USB device capable of supplying power. LED will remain lit while glasses are charging. When battery is fully charged LED will go off.

For more information on glasses status and transitions, refer to “3D Glasses” on page 22.

Distances from glasses to 3D RF Emitter

The minimum distance from glasses to 3D RF Emitter is 10 m, the maximum depends on how the room is made.

AC Power

Choose the AC power cord that is appropriate in your area among those shipped with the product. Plug the female end of the power cord to the AC receptacle located on the right hand side of the projector (100-240 V AC, 50-60 Hz) and the other end into a grounded AC outlet. An high-quality surge protector is recommended while a UPS is optional.

Switching On and Off

Switching On

1. Turn on the main power switch on the right hand side of the projector. The projector enters the low power Standby status. The indicator light on the left hand side of the projector turns red and the status display next to it shows **..**.
2. Press any of the numeric keys (**0-9**) on the remote control or the **I/O** button on the projector keypad to switch on the projector.
3. The indicator light turns green and red and the status display shows **88** for a while.
4. When the projector is ready for use an image appears on screen (this can take approximately one minute).
5. If a valid signal is detected, an image appears on the screen, otherwise a black screen with a “No Signal” message is displayed.

Switching Off

1. Press and hold the **Off** key on the remote control or the **I/O** button on the projector keypad.

The indicator light flashes green and red to indicate that the projector is cooling down. Cooling fans remain on for approximately one minute to cool the lamp. In the meanwhile the projector cannot be turned on again.

2. After cooling is complete the projector enters Standby status. The indicator light turns solid red and the status display turns black, unless an error or warning code is displayed.

Warning: Wait for the cooling fans to turn off before turning off the main power switch or unplugging the projector.

4 Operation

Viewing 3D Content

3D stereo visualization offers clear and sharp 3D images thanks to 3 chip DLP Imaging technology. This technique achieves channel separation using active shutter glasses.

- Active shutter glasses turn on and off in rapid succession and stop light reaching your eyes. The glasses are synced using a RF emitter connected to the projector.
- When an image is destined for the left eye, the right lens of the glasses goes dark preventing any of the image for your left eye from reaching the right eye. The left lens is completely open.
- The process repeats very quickly (up to 120 times per second) for each eye.
- The human brain combines the two images and creates the illusion of 3D.

Important: Read 3D safety information at the beginning of this User Guide before viewing 3D content.

Your SIRIO projector is capable of displaying 3D Images of exceptional high quality; to ensure maximum enjoyment and trouble free viewing we recommend the following guidelines.

- You will need a Blu-ray player or equivalent that is capable of playing 3D content and is HDMI compliant plus of course a copy of a film that has released on Blu-ray in 3D. Only films with the 3D logo are compatible. 
- Ensure your player has the latest software installed.
- If your Blu-ray Player has dual HDMI outputs, we would recommend direct connection to the projector from one of the HDMI connections and the second HDMI output to the input of an appropriate AV receiver/processor for audio.
- If you are routing all of your HDMI sources through an AV receiver/processor the product must be 3D compatible and HDMI compliant. Ensure your equipment has the latest firmware installed (refer to the manufacturer for further information).
- Other 3D content providers are available such as Satellite Broadcasters, Cable providers, VOD and Streaming services, gaming consoles such as PlayStation 3. Details of the 3D service provided can be obtained by contacting your local/regional operators.

To watch 3D Content via Blu-ray

- Switch on the SIRIO and all other relevant products such as Blu-ray player and AV receiver and ensure the correct inputs have been selected.
 - Insert your 3D Blu-ray disc and press play, follow the on-screen menus.
- Note:** Some discs contain both the 3D and 2D versions of the film, ensure you select the correct one.
- Switch on your 3D glasses. Refer to the instructions supplied with the glasses to ensure correct operation.
 - The projector will automatically detect the 3D signal and you will be prompted to wear your glasses via the OSD.

To Watch 3D Content via Satellite, Cable and Games Console

- Switch on the SIRIO and all other relevant products such as Satellite receiver and AV receiver and ensure the correct inputs have been selected.
- Select the appropriate 3D channel.
- If the projector displays two distorted images side by side or one on top of each other, select the 3D menu by pressing **II** on the remote control.
- Select 3D mode via the OSD (this will expand the menu). Select the correct version of the 3D format using the up/down/left/right keys.
- Switch on your 3D glasses. Refer to the instructions supplied with the glasses to ensure correct operation.

Important: All 3D technologies currently available today filter out a large amount of light. Therefore it is perfectly normal for the 3D image to be noticeably dimmer when compared to the picture in 2D mode. Adjust the 3D picture and lamp settings accordingly for 3D viewing.

3D Glasses

Follow the simple instructions below to operate your 3D glasses.

Turning ON your glasses

Shortly press button once (see “3D Glasses” on page 12). You will see the red LED indicator change from off to bright, and then turn off again. You are now in SIM2 Cinema mode and the glasses and the projector are synced. If, for any reason, the glasses behave differently, reset them (see below).

If glasses cannot find 3D RF emitter within few seconds, LED will ramp from bright to off and glasses will automatically shut down. If glasses find the RF emitter they will automatically connect to it, indicating by lit LED for 1 second.

Turning OFF Your Glasses

Shortly press button once (see “3D Glasses” on page 12). You will see the red LED indicator change from bright to off. Glasses will shut down.

Note: For charging the battery to “3D Glasses” on page 19.

3D Menu

To view 3D content additional adjustments are required. With 3D content playing, press **II** on the remote to access the OSD **3D** menu.

3D Mode

- **3D** Activates 3D mode and the RF emitter will be activated. Automatic selection is determined by the source sending the projector the correct information. If the incorrect 3D image is displayed after approximately 10 seconds go to the 3D Input Format and manually select the correct 3D mode for the incoming signal.
- **2D** display mode for normal 2D material. 3D Input Format adjustment is unavailable. PureMotion adjustment is available.

3D Input Format

The SIRIO checks AVI infoframe data and input signal resolution in order to determine the appropriate 3D format. When automatic detection of 3D format is not possible, choose one of the following options:

- (S-S) Side by Side** Left and right halves of the image are separated, rescaled and displayed. This mode should be applied to 3D images composed of two stereoscopic images compressed to half of their original horizontal resolution and sent simultaneously.

- (T-B) Top and Bottom** Top and bottom halves of the image are separated, rescaled and displayed. This mode should be applied to 3D images composed of two stereoscopic images compressed to half of their original vertical resolution and sent simultaneously.

- (F-S) Frame Sequential** This mode should be applied to 3D images that consist of a sequence of alternating frames wherein each successive frame carries the image meant for one or the other eye.

Note: You may need to change the order in which left and right frames are displayed. See “3D Left/Right” below.

3D Left/Right

Use this setting if the 3D effect has an uncomfortable look about it. This setting will change the perception of depth. It is important that the image destined for the left/right eye reaches the correct eye. Sometimes the easiest way to check is to pause the program content to check. For the effect to change you must press **Esc** to exit from the OSD.

- Normal** Left and right frames are displayed in the native sequence.

- Swapped** Left and right frames are swapped. Use this setting if image does not give the correct sense of depth.

Supported 3D Video Formats

Compatible 3D formats are listed in Table 4.1.

Table 4.1

Signal	3D Format	HDMI	DVB
1920 x 1080p @ 23.98/24 Hz	Frame Packing	Yes	
	Side by Side		Yes
	Top and Bottom	Yes	Yes
1920 x 1080p @ 25 Hz	Side by Side		
	Top and Bottom		
1920 x 1080p @ 29.97/30 Hz	Side by Side		
	Top and Bottom		
1920 x 1080p @ 50 Hz	Side by Side		
	Top and Bottom		
1920 x 1080p @ 59.94/60 Hz	Side by Side		
	Top and Bottom		
1920 x 1080i @ 50 Hz	Side by Side	Yes	Yes
	Top and Bottom		
1920 x 1080i @ 59.94/60 Hz	Side by Side	Yes	Yes
	Top and Bottom		
1280 x 720p @ 50 Hz	Frame Packing	Yes	
	Side by Side		Yes
	Top and Bottom	Yes	Yes
1280 x 720p @ 59.94/60 Hz	Frame Packing	Yes	
	Side by Side		Yes
	Top and Bottom	Yes	Yes

Some adjustments may not be available, depending on the 3D signal format. Refer to Table 4.2 for details.

The items that cannot be adjusted are not displayed in the menu. When Aspect is not available is it fixed at **Normal**. When Keystone is not active, its value is 0 (no correction).

Table 4.2

3D Format	Signal	Aspect	Keystone
Frame Packing	1920 x 1080p @ 23.98/24 Hz	●	●
	Others	-	-
Side by Side	All	● ¹	-
Top and Bottom	All	-	-

Notes:

1. except Panoramic

Input Menu

The desired input can be selected by pressing the corresponding number key on the remote control or through the **Input** menu.

- To enter the **Input** menu press:

Key **0** on the remote control or **Source** on the projector keypad.

- To select an input press the corresponding number on the remote control, or:

1. **▲** or **▼** on the remote control or on the keypad to highlight the input

2. **●** on the remote control or on the projector keypad to confirm

- To turn off the **Input** menu press:

Esc on the remote control or on the keypad

Each time an Input is changed an information window appears on the screen and remains there until a valid signal is detected (this feature can be disabled in the **Setup** section of the main menu, see “Source Information” on page 34).

If no signal is detected on the selected input, an appropriate message is displayed.

Main Menu

The main menu gives access to all projector adjustments. It is divided in four main sections (**Picture**, **Image**, **Setup** and **Menu**) with various item and submenus in each of them.

- To enter the main menu and select the desired section press:

MENU + or **MENU -** on the remote control or on the keypad

- To enter a submenu (when available) press:

● on the remote control or on the keypad

- To return to the previous menu when in a submenu press:

MENU + on the remote control or **●** on the keypad

- To select menu items press:

MENU + or **MENU -** on the remote control or on the keypad

- To turn off the main menu press:

Esc on the remote control or on the keypad

- To change settings or select an item on a list press:

◀, **▶**, **▲** or **▼** on the remote control or on the keypad

Note: Depending on the selected input source and signal characteristics, some adjustments may not be available.

Picture and **Image** menu sections provide access to most commonly-used projector adjustments. Note that:

- you can enter these sections only when an image is displayed

- the controls in these sections only operate on the active input

- when you select another input or change mode (2D/3D), all the settings in these sections are automatically saved

- each time you select an input or change mode (2D/3D), the previously saved settings for that input or mode will be automatically recalled
 - if a finer control over saved settings is desired, use the Memory management function (see “Memories” on page 34)
- Setup** and **Menu** sections provide access to installation and OSD adjustments. The settings in these sections are global (for all inputs and modes, not just the active one).

Picture

This menu section provides access to common image quality adjustments. Adjustments not available for a given input are not displayed in the menu (See Table 4.3 for details).

Table 4.3

	Video	RGBS YPrPb	RGB Graphics	HDMI 1/2
Brightness	●	●	●	●
Contrast	●	●	●	●
Color	●	●	●	● ³
Tint	● ¹			
Sharpness	●	●	●	●
Filter	●			
Sharpness Mode		●	●	●
Cinema Mode	●	●		
Noise Reduction	●	● ²	●	●
Mode	●	●	●	● ⁴
DynamicBlack	●	●	●	● ⁴
PureMotion	●	●	●	● ⁴

Notes:

1. NTSC only
2. YPrPb Interlaced only
3. YPrPb only
4. 2D only

Brightness

Use this control to adjust the darker areas of the picture (black level), without affecting bright areas. Increasing the value will give more detail in darker parts of the picture. For correct adjustment it may prove useful to display a gray scale test pattern with at least twenty bands. Now try to reduce the brightness of the black band as much as possible while ensuring that it can still be distinguished from the adjacent band with brightness slightly higher than black. Alternatively use a scene composed of black objects alongside other dark colored objects and try to ensure that all the objects can be separately identified.

Contrast

Use this control to adjust the image's white level without affecting its dark areas. For correct adjustment it may prove useful to display a gray scale test pattern with at least twenty bands. Now try to increase the brightness of the white band as much as possible while ensuring that it can still be distinguished from the adjacent band with brightness slightly less than white. Alternatively use a scene composed of well-lit white objects surrounded by light objects with lower level lighting, and try to ensure that all the objects can be separately identified.

Color

This control (also called Saturation) increases or decreases the picture color intensity. When set to zero, color images are shown in black and white. Increase the value until the colors appear natural: suitable references include skin tones and the green in grass in landscape shots.

Tint

This adjustment controls the purity of colors. Basically it determines the red-green ratio of the picture. Decreasing the value increases the red content of the image, increasing it increases the green content. For this adjustment use skin tones or a test card image with color bars as a reference. This adjustment is primarily used for NTSC sourced material.

Sharpness

This adjustment increases or decreases the level of picture detail. When the sharpness value is reduced the image details appear less pronounced, while increasing the value raises image definition, making the outline of objects sharper. Note that an excessively large value may result in a noisy picture and the outline of images will have a high amount of edge enhancement.

Filter

This adjustment selects the mode in which the input signal is processed. Selecting the most appropriate value for a given input signal ensures the best horizontal and vertical definition and makes the picture sharper.

Sharpness Mode

This adjustment selects the type of processing associated with sharpness adjustment. For an interlaced or progressive video signal, set to Video; for PC graphics signals, set to Graphics. If the **Video** option is set, it applies **Noise Reduction** to increase the clarity of the image.

Cinema Mode

Use this option if the video signal source is a movie film (obtained from a Telecine device with 3:2 or 2:2 pull-down). In this case a deinterlace algorithm optimized for this type of signal is applied. Selecting **Auto** mode causes the deinterlacer to analyze signal characteristics and apply the correct deinterlace mode automatically.

Noise Reduction

This adjustment lets you choose the value of the noise reduction filter.

Mode

When viewing 2D contents, you can choose between two user modes:

•**PureMovie** allows a pure and unprocessed presentation of the signal coming from your source. You can then choose whether or not to engage the DynamicBlack function. DynamicBlack works with PureMovie mode; it improves the level of black and increases the depth and the detail of the image especially in parts with low and medium brightness. It regulates light based on the informative content of the image being projected. Available settings are **Off**, **Video** and **Movie**. **Off** is recommended when using test pattern for measurement or calibration purposes.

•**PureMotion** specifically created for fast-action material, yields smooth motion, free from smear or judder. Activates the motion estimation/motion compensation function, which suppresses motion judder. Settings available are **Off**, **Low**, **Medium**, or **High**. Default setting is **Low**.

Note: When viewing 3D contents, the PureMotion3D mode is automatically activated.

Image

This menu section provides access to some advanced image settings. Adjustments not available for a given input are not displayed in the menu. See Table 4.4 for details.

Table 4.4

	Video	RGBS YPrPb	RGB Graphics	HDMI 1/2
Aspect	●	●	●	●
Color Management	●	●	●	●
Gamma Correction	●	●	●	●
Overscan	●	●	●	
Position		●	●	
Frequency		●	●	
Phase		●	●	
Y/C Delay	●			
Signal Range				● ¹
Lamp Power	●	●	●	●

Notes:

1. when RGB or AVI infoframe missing or incomplete

Aspect

This adjustment changes the dimensions and aspect ratio (relationship between width and height) of the displayed image. There are six default aspects available and three user aspects (with user-settable parameters). You can select a different aspect for each source: the selected aspect ratio will be automatically applied the next time the relative source is displayed. You can also select the required aspect ratio from the remote control by repeatedly pressing  or by pressing  and one of the number 1-9. The following aspects are available:

•**Normal** projects the image occupying the full height of the screen while maintaining the aspect ratio of the input signal. When the input signal aspect ratio is 4:3, black vertical bands are displayed on the right and left of the picture.

- **Anamorphic** correctly displays a 16:9 image with over scan.
- **Letterbox** displays a 4:3 letterbox image (source signal with black bands above and below the picture) in such a way that it fills the 16:9 screen and maintains the correct aspect. This aspect ratio is also recommended when using Anamorphic Lenses.
- **Panoramic** widens the 4:3 image cutting off a strip from the top and bottom. Panoramic is ideal for displaying a 4:3 image on the 16:9 screen of the display.
- **Subtitles** moves the image upwards, making enough space for the subtitles to be seen.
- **Pixel to Pixel** makes a pixel to pixel map of the image, without introducing any alteration or over scan to adapt it to the screen. The image is projected in the center of the screen and if its horizontal and vertical dimensions are smaller than the display, it is bordered by vertical and horizontal black bands.
- **User 1, 2, 3** can be used if none of the preset formats are satisfactory. You change the size and shape of the image (and hence the aspect ratio) through the **Horizontal** and **Vertical** adjustments.

Note: With Progressive HDMI signals of any resolution, the horizontal adjustment of the User aspect works only for negative values.

You can assign one or more trigger outputs to each aspect ratio. Those triggers are then activated by selecting that aspect ratio:

- **Screen** controls TRIG2 and should be used for the control of a screen masking system
- **Anamorphic Lens** controls TRIG3 and should be used for the control of a motorized anamorphic lens mount

See “Connections” on page 11 for a description of Triggers and their functions.

Color Management

This menu is divided in three sections. Choose:

- **1** on the remote control to activate the first column on the left (**Primaries**), Here you can select one of the five preset settings for primary color coordinates:
 - **Native** the projector native primary color coordinates
 - **HDTV, EBU, SMPTE-C** the primary color coordinates defined by the standards
 - **Auto** the appropriate primary color coordinates for the current input signal (automatically identified)

Note: When using Live Color Calibration software, two additional custom modes will become available. Live Color Calibration lets you define a custom color gamut in terms of primaries (red, green and blue), secondaries (yellow, cyan and magenta) and white color coordinates. Therefore when one of these custom modes is selected, sections 2 and 3 are disabled.

- **2** on the remote control to activate the central column (**White Point**), where you can select one of the nine preset settings of the white point:
 - **Standard** the white point associated to the value selected in column **1**
 - **High, Medium, Low** default white balance levels
 - **Native** the projector native white point
 - **D75, D65, D50** the C standard CIE illuminants

- **User** a white point that can be adjusted according to your personal preferences as follows:

- press the number **3** on the remote control to activate the User column
- position the white point within the CIE chromaticity diagram

Note: To accurately set the Primaries and White Point you will need access to specialized color measuring equipment and also the knowledge to use such equipment. Alternatively, contact the SIM2 Authorized Dealer where you purchased your product and ask them to arrange for an ISF certified calibrator to set up your projector.

Gamma Correction

Determines the projector response to the gray scale, emphasizing or attenuating the different grades of brightness (blacks, dark, medium and light grays, whites) in the projected image. Choose the setting that is appropriate to the type of video source, the ambient lighting and your subjective preferences. The available settings are:

- **Natural** the default preset curve, appropriate for most situations
- **Dynamic** the preset curve that increases the detail in the dark areas of the image
- **Parametric** that lets you select the coefficient that determines the curve. Coefficient values smaller than 2.2 emphasize the detail of dark images, while reducing overall contrast. Values larger than 2.2 increase overall contrast, but reduce the detail of dark areas. For the most common video sources, if you set the parameter to 2.2 you obtain pleasant and well-contrasted images.

Note: When using Live Color Calibration software, Natural and Dynamic preset curves can be replaced by two custom curves.

Overscan

Removes the outer edges of the image and magnifies the remaining portion of the image to fill the display area. It is useful with sources that output images with imperfections around their borders.

Position

Use this adjustment to position the image vertically and horizontally. These parameters do not normally require adjustment because the projector checks the input signal and automatically sets the most suitable values. However, if the image is not perfectly centered it may prove useful to make the projector repeat the input signal analysis and image positioning, activating the automatic adjustment procedure with the **Auto** key on the remote control. When this procedure is requested it is helpful to have a white or light colored background in the current picture on the screen.

Frequency/Phase

These adjustments, available for progressive signals and for signals from a PC, ensure correspondence between the number of pixels making up the signal and the number of pixels that make up the projected image. The projector usually detects the most suitable values but, if the image is disturbed (loss of resolution between equidistant vertical bands or instability and lack of detail in thin vertical lines), you can press **Auto** on the remote control to activate the automatic adjustment function. If the automatic procedure fails to achieve the required effect, enter the Frequency and Phase values

manually and move sufficiently close to the screen to observe the effects of the adjustments.

Y/C Delay

Where Video signals are concerned, use this adjustment to correct horizontal color misalignment within the projected image. For a given video standard (for example PAL or NTSC) the stored value does not normally require further adjustment, unless the source or connection cable is changed.

Signal Range

Determines the signal data range of HDMI signals. It is available when the HDMI signal comes from a RGB source or when the AVI (Auxiliary Video Information) infoframe of the HDMI signal is missing or inconsistent.

- Auto** determines the signal range using the information provided by the AVI infoframe of the HDMI signal. If the AVI infoframe is missing or inconsistent, the projector uses values 0-255. Auto (which is the default setting) usually selects the correct signal range but you can force either 16-235 or 0-255
- 16-235** sets black at R, G, B = 16 and white at R, G, B = 235, to match the luminance values of digital component standards
- 0-255** sets black at R, G, B = 0 and white at R, G, B = 255

Setup

This menu section provides access to installation adjustments.

Orientation

Selects the orientation of the projected image. Available settings are: Floor, Ceiling, Floor Rear and Ceiling Rear.

Keystone

This adjustment compensates the distortion resulting from the angle of projection.

Note: Keystone may cause artifacts in the image and may not be available when displaying specific 3D content (see Table 4.2). SIM2 recommends that you use this feature only when necessary.

Projection Lens

To set the custom settings for zoom, focus, vertical and/or horizontal shift is necessary to enter the SETUP menu, Projection Lens or more quickly by pressing the F1 button on the remote control.

- Zoom:** see zoom on page 33
- Focus:** see focus on page 33
- Lens Shift:** use ◀, ▶, ▲ or ▼ to shift horizontally and/or vertically the projected image
- Lens Center:** auto lens adjustment to reach on-axis position.
- Vertical Picture offset:** vertical compensation for the center shift of image (see note).
- Lens Shift Calibration:** Perform calibration and return lens to the center position
- Lens Zoom-Focus Calibration:** Perform zoom and focus motors calibration

There is the possibility to save the settings for the positions of zoom, focus, vertical and/or horizontal shift corresponding to a video format for each type of signal, for each input of the projector. (see “Memories” on page 34)

Note: In the case of off-axis projection, zooming in and out, you get a changing of the center of the image corresponding to the amount of the off-axis. This changing amount must be compensate with the vertical and/or horizontal shift. The zoom, focus, vertical and/or horizontal shift do not work for the LENS0 as it is a fixed zoom lens.

Warning: After you have selected and confirmed the lens shift calibration, the lens starts to move. Do not touch, or place anything near the lens, otherwise it may cause injury or a malfunction.

With some setting positions, the range of lens shift may be restricted, even though the unit is installed within the specified parameters.

Lamp Settings

•**Lamp Power:** set the value of the lamp power (in Watts). The power ratings ranging from 280W to 350W, with a step of 10W. Lower values decrease brightness but extend the life of the lamp.

•**Lamp Selection:** select which lamp(s) is in use.

- 1: one lamp illuminates, the lamp #1
- 2: one lamp illuminates, the lamp #2
- Both: two lamps illuminate: lamp #1 and lamp #

• **Auto Switch Time:** This function is enabled if it is working only one lamp.

It is possible to set the number of hours after that the projector will automatically switch the lamp for uniform lamp consumption and uniform brightness.

By default the projector will automatically switches the lamp on failure.

The time ranging from 0 to 100 hours.

The Auto Switch function, at indicated time, will be enabled if it will be different from zero value, and it coming at next projector power-up, not when displaying an image.

For example, consider current lamp is Lamp #1, with 120 hours, and Lamp #2 have 80 hours, and "Auto Switch Time" is setting to the value 30. When Lamp #1 reaches 150 hours, projector will auto switch to lamp #2.

•When Lamp #2 reaches 110 hours, projector will auto switch again to lamp #1.

Test Patterns

Enters internal test patterns, that are needed for installation or calibration purposes. Press ▲ or ▼ on the remote control or on the projector keypad to cycle through the test patterns. To exit test patterns press **Esc** on the remote control or on the projector keypad.

Note: OSD menus are not available while test patterns are displayed.

Initial Settings

Resets most projector settings to their factory presets. The settings in the following list are not reset:

- Serial Number and Model name
- Lamp Hours
- User Memories (including Memories Names)
- Source List (including Source Names)
- Orientation
- Zoom and Focus

- Y/C Delay

- Position

Note: Before performing this operation, a confirmation message appears. Press ► to Confirm and continue with the reset or press ◀ to Cancel.

Shutter

Controls the lens shutter in the the optical engine. If active it stops projected light/image. Press any key on remote control or to the keyboard on the back panel to remove lens shuttering..

Menu

This menu section provides access to OSD adjustments.

Language

Selects the desired OSD language. The SIRIO can display the menus in English, Italian, French, German, Spanish, Swedish, Portuguese, Russian and Simplified Chinese.

Source List

Allows customization of the Input list. To change the status of an input:

- 1.highlight the input

- 2.use the ◀ and ► keys to **Enable** or **Disable** the input.

Disabled inputs are not shown in the input selection menu and cannot be selected via keys **1-5** of the remote control.

Important: Active inputs are numbered according to their position in the list. Changing the status of an input modifies the numbers assigned to the inputs that follow (which is undesirable if you are using a custom control system).

You can change the label of each input (for example assigning the name of the device it is connected to). To rename an input:

- 1.highlight the input

- 2.press ● on the remote control to enter Text Entry menu

- 3.use the ◀ and ► keys to underline the character you would like to change

- 4.enter the desired symbol using keys **1-9** on the remote control

- 5.cycle through steps 3 and 4 until you have finished entering your custom label

- 6.press ● on the remote control to save the label you have entered, or **Esc** to discard your changes

F1-F2 Keys

You can have direct access to some functions through the **F1** and **F2** keys on the remote control.

The default assignments are: F1 = Zoom, F2 = Focus.

To assign a different function to one of these keys:

- 1.highlight the function using ▲ or ▼

- 2.press **F1** or **F2** to set the key assigned to that function.

Available functions are:

- Zoom** Activates the optical zoom control, where the ◀ and ► keys zoom out and in respectively. By pressing ● on the remote control a specific internal test pattern is displayed. This is the default function for key **F1**.

- Focus** Once selected, ◀ and ▶ allow the image to be focused. By pressing ● on the remote control specific internal test pattern is displayed. This is the default function for key **F2**.

- Blank** Turns off the video signal on-screen. Press **Esc** to restore video to the screen.

- Gamma correction** Activates Gamma Correction quick menu. Use ▲ or ▼ to cycle through available Gamma tables.

- Freeze** Turns on or off picture still mode.

Source Information

When enabled (**Yes**), the projector displays information about the current input signal every time a new signal is detected. If disabled (**No**) no information is displayed.

Help Menu

When enabled, the Help bar (providing tips for menu navigation) is displayed at the bottom of the main menu.

OSD Background

Selects the background of the OSD (**Clear** or **Solid**).

OSD Position

Changes the location for the display of the Main Menu OSD.

To select one of the nine preset positions:

- press **1-9** on the remote control

To create a custom position:

- 1.select the preset that is closest to the desired position

- 2.use ◀, ▶, ▲ or ▼ for a finer adjustment

Note: Avoid locations too close to corners or edges to prevent cropping of larger menus.

OSD Display Timeout

Sets duration OSD is visible after the last event. Adjust in 10 second increments from 10 to 200 seconds.

Memories

You can store and recall at a later time up to six different sets of values (Memories) per input type, so that you have customized setups for each viewing condition. Each memory saves the main image settings that are available for a given input type. Refer to Table 4.5 for details.

Table 4.5

Settings	Video	RGB/YPrPb Graphics RGB	HDMI 1/2 2D	HDMI 1/2 3D
Brightness	●	●	●	●
Contrast	●	●	●	●
Color	●	●	● ¹	● ¹
Sharpness	●	●	●	●
Sharpness Mode		●	●	●
Filter	●			
Cinema Mode	●	●		
Noise Reduction	●	●	●	
DynamicBlack	●	●	●	
PureMotion	●	●	●	
Aspect	●	●	●	● ²
Color Primaries	●	●	●	●
Color White	●	●	●	●
Gamma	●	●	●	●
Lamp Power	●	●	●	●
Zoom	●	●	●	●
Focus	●	●	●	●
Lens Shift H/V	●	●	●	●
Vertical Picture Offset	●	●	●	●
3D Input Format				●

Notes:

1. YPrPb only

2. See Table 4.2 on page 24 for more information

The Memory Management function menu page is activated by pressing the **Memory** key on the remote control.

Save Current Settings

To save the current settings for the active input in Memory (1-6):

- 1.press the Memory key on the remote to display Memories menu
- 2.press ▲ and ▼ to highlight the desired memory
- 3.press ● to open the corresponding pull-down menu
- 4.press ▲ and ▼ to highlight **Save current settings**
- 5.press ► to execute

The confirmation message “**Current settings saved in Memory (1-6)**” is displayed. The icon at the left of the memory name now indicates that custom values are stored. If desired, repeat the steps above to save additional memories in different locations.

Note: You can change the name of each memory. See “**Rename**” below for details.

Recall

To recall the settings for the current input you have previously saved in a Memory:

- 1.press the **Memory** key on the remote to display Memories menu

2.press ▲ and ▼ to highlight the desired memory

3.press ► to execute

The confirmation message “**Memory (1-6) recalled**” is displayed. The last memory you have recalled becomes the active memory for the current input (the memory that is automatically recalled each time that input is selected). If this behavior is not desired:

1.recall the desired memory as described above

2.select **Auto** (the line numbered 0 in the Memory menu) and press ►

Note: If you are using a custom control system, discrete codes for recalling Memories are available.

Save Initial Settings

To restore factory-default settings for a previously saved memory:

1.press the Memory key on the remote to display Memories menu

2.press ▲ and ▼ to highlight the desired memory

3.press ● to open the corresponding pull-down menu

4.press ▲ and ▼ to highlight **Save initial settings**

5.press ► to execute

The confirmation message “**Initial settings saved in Memory (1-6)**” is displayed. The memory icon now indicates that the memory does not store custom values.

Note: The other memories are unaffected.

Rename

To change the name of each memory:

1.press the Memory key on the remote to display Memories menu

2.press ▲ and ▼ to highlight the desired memory

3.press ● to open the corresponding pull-down menu

4.press ▲ and ▼ to highlight **Rename**

5.press ● on the remote control to enter Text Entry menu

6.use ◀ and ▶ to underline the character you would like to change

7.enter the desired symbol using **1-9** on the remote control

8.cycle through steps 6. and 7. until you have finished entering your custom label

9.press ● on the remote control to save the label you have entered, or **Esc** to discard your changes

Important: When you enter the Memories menu, a copy of the current setting for the active input is saved in a temporary memory, numbered 0 and called **Auto**. After recalling one or more memories for the current input, you will be able to revert to **Auto** settings at any time, provided that you do not exit Memory menu by pressing **Esc**.

Info

Displays a summary of the projector settings

This function is displayed by pressing **Info** on the remote control.

Quick Menus

The quick menus provide access to the main adjustments that affect image quality without opening the main menu. The adjustments **Brightness**, **Contrast**, **Color**, **Tint**, **Sharpness** and **Noise Reduction** will appear one after the other in the lower part of the screen by pressing ▲ or ▼.

Messages

The following messages may appear on your screen:

•**No signal**. The projector does not recognize any signal applied to the selected input. In this case:

- make sure the selected input is connected to a video or graphic signal and that this source is functioning correctly.
- check the condition of the cables used to connect the system to the various sources.
- make sure the video or graphic signals supplied by the source are compatible with the system technical specifications and, in particular, with those of the selected input.

•**Out of range**. This message appears when either the resolution or the vertical/horizontal frequency of the input signal exceeds system specifications (for example a QXGA graphic signal).

5 Troubleshooting

The projector does not turn on

- Make sure the main power switch (at the rear of the projector) is in the On position.
- Ensure the projector is connected to an electrical outlet and the outlet is working.
- Check the fuse located near the AC receptacle on the right hand side of the projector.

Lamp does not turn on

- If the projector is cooling down (indicator light flashing green and red), wait until cooling is complete. After Standby mode is entered (indicator light solid red), turn projector on again.
- The lamp may have overheated. Check that the air inlets and outlets are not blocked and that room temperature is within specifications. Wait at least 10 minutes and then turn the projector back on.
- Check the Status Display for any errors. Contact your SIM2 Authorized Dealer for assistance if the error persists.
- Lamp may need replacement. Contact your SIM2 Authorized Dealer for assistance.

“No Signal” Message is displayed

- Make sure the correct Input is selected.
- Make sure the desired video source is on and its output is configured correctly.
- Check cable connection from the desired video source to the projector.

No image is displayed

- Check the shutter is not active.

Remote control does not work

- When using the remote, point it directly at the front of the projector.
- Remove any obstacles between the remote and the infrared sensor in the front of the projector.
- Make sure the remote control batteries are in good condition and are inserted correctly.

3D content cannot be displayed

- Turn the projector off and the 3D source off.
- Ensure your source is 3D compatible and the 3D output is enabled. Ensure 1080p resolution and 24 Hz options are enabled in the 3D source to enjoy full HD 3D viewing. (See your 3D source user guide).
- Turn the projector on first and then turn the 3D source on. Try to play 3D content again.
- Ensure the emitter is connected and your glasses are switched on

3D content is displayed as two near-identical images

- If they are next to each other, press the 3D key on the remote control and then choose Side by Side 3D Input Format.
- If they are one above the other, press the 3D key on the remote control and then choose Top and Bottom 3D Input Format.

3D image lacks depth

- Press the 3D key on the remote control, highlight the 3D Left/Right setting and then choose the value (either Normal or Swapped) that restores the correct sense of depth in the image.

HDMI Connection Issues

- 3D requires a substantial data throughput therefore use a good quality High Speed HDMI cable – with or without Ethernet.

- Avoid using excessively long HDMI cables as this contributes to poor connection issues.

- Cable lengths over 10 m are not recommended.

- Avoid using HDMI cables that have illuminated plugs or active systems that draw on the 5 V supply rail. If the 5 V drops lower than 4.7 V you will not get any picture!

- Sparkles of random color on screen. This usually means that the cable doesn't have the bandwidth capabilities to handle the signal.

- Try changing the cable or use a shorter cable.

- Try using a lower resolution for example if you are using 1080p try switching to 1080i. If this solves the problem the cable is the likely culprit.

- When switching inputs on either the projector or the AV Receiver/Processor sometimes the picture is either green or pink. This usually means the incorrect color standard has been selected. This is sent automatically every time you switch HDMI inputs but sometimes the information is not received by the display.

- Reselect input, if problem persists disconnect the HDMI cable to either the display or output of the receiver and reconnect – this instigates a hot-plug detect and should resolve the issue.

- If the problem persists check with your AV receiver/processor/Blu-ray manufacturer for the latest software updates.

- Try a different HDMI cable.

- Snowy picture. This means that the HDCP system has not authorized the playback of the material.

- Usually re-selecting the input will resolve the problem.

- If the problem persists then it is more than likely to be cable related. Try other cables.

- Try bypassing other product in the system chain. For example connect the Blu-ray player direct to the projector.

6 Specifications

Projection Type	Digital Light Processing (DLP), 1-chip DLP Type: 0.65 in., 1920 x 1080
Projection Lens	High-quality glass Throw ratio: ▪ M0: Fixed throw 0,8 ▪ M1: 1.21 ÷ 1.45 ▪ M2: 1.45 ÷ 1.94 ▪ M3: 1.94 ÷ 3.67 ▪ M4: 3.67 ÷ 6.98
Lens shift	Motorized and memorizable (Vertical, +60 % / -20%, Horizontal +10% / - 10% of image)
Zoom and Focus	Motorized and memorizable (controlled via remote control and OSD)
Shutter	Motorized
Fan Control	Variable cooling fan speed for minimum acoustic noise
Lamp	2 x High pressure 350 W (dimmable to 280 W) Autoswitch in case of lamp failure
Inputs	▪ 1 x Composite Video (through Green RCA) ▪ 1 x Component - Analog YPrPB/RGBS (3 x RCA) ▪ 1 x RGBHV (D-Sub 15-pin female) ▪ 2 x HDMI with 3D, DeepColor and InstaPort (1.4a)
Controls	▪ IR remote ▪ Keypad on rear panel ▪ RS-232 Serial commands
Communication Ports	▪ 1 x USB 1.1 (type A) for serial commands and firmware upgrade ▪ 1 x RJ45 for networking connection ▪ 1 x RS232 (female D-Sub 9-pin) for serial commands and firmware upgrade
Outputs	▪ 1 x VESA DIN-3 for 3D sync Out ▪ 1 x 12 V 100 mA jack for system on/off ▪ 1 x 12 V 100 mA jack for 4:3/16:9 aspect ratio ▪ 1 x 12 V 100 mA jack for anamorphic lens driving
Frequency	▪ Horizontal: 15-80 kHz ▪ Vertical: 24-30 Hz and 48-120 Hz

Video Standards	▪ Composite: NTSC 3.58/4.43, PAL B/G/H/I/M/N/60, SECAM (automatically selected) ▪ Components/RGBHV: 480i, 576i, 480p, 576p, 1080i 50/60, 720p 50/60, 1080p 24/25/30/50/60, VGA, SVGA, XGA, SXGA, UXGA ▪ HDMI: 480i, 576i, 480p, 576p, 1080i 50/60, 720p 50/60, 1080p 24/25/30/50/60, VGA, SVGA, XGA
3D Formats	▪ All HDMI mandatory formats ▪ All DVB formats ▪ Others (refer to Table 4.1)
Aspect Ratios	Normal (Full Height), Anamorphic, Letterbox, Panoramic, Pixel to pixel, Subtitle, User (3)
Color Gamut	Includes REC 709, fully adjustable with presets (HDTV, EBU, SMPTE-C)
Deep Color Processing	Ready
Power	▪ Requirement: 100-240 V AC $\pm 10\%$ @ 48-62 Hz ▪ Operating Consumption: 920 W ▪ Standby Consumption: < 1 W @ 240 V - < 0.5 W @ 100V
Size and Weight	▪ Depth: 565 mm (22.3 in.) ▪ Width: 465 mm (18.3 in.) ▪ Height: 242mm (9.5 in.) ▪ Weight: 25 kg (55.5 lb.) approx.
Temperature	▪ Operating: 10° C to 35° C ▪ Storage: -15° C to 55° C
Certifications	▪ Low Voltage Directive: EN 60950-1/UL60950 ▪ EMC Directives: EN 55022, EN 55022 A1 A2, EN61000-3-2, EN61000-3-3

7Projection Distances

1.78:1 (16:9) Screen


Screen			Projection Distance									Vertical Offset (m)
			M0 (0.77:1)	M1 (1.21÷1.45:1)		M2 (1.45÷1.93:1)		M3 (1.93÷3.67:1)		M4 (3.67÷6.97:1)		
Diagonal Size (in.)	Width (m)	Height (m)	Fixed Lens (m)	Min (m)	Max (m)	Min (m)	Max (m)	Min (m)	Max (m)	Min (m)	Max (m)	
100	2.21	1.25	1.8	2.7	3.2	3.3	4.2	4.3	8.1	8.2	15.4	0.62
120	2.66	1.49	2.1	3.3	3.8	3.9	5.1	5.2	9.7	9.8	18.5	0.75
150	3.32	1.87	2.6	4.1	4.8	4.9	6.4	6.5	12.1	12.2	23.1	0.93
180	3.98	2.24	3.1	4.9	5.7	5.8	7.6	7.7	14.6	14.7	27.7	1.12
200	4.43	2.49	3.5	5.4	6.4	6.5	8.5	8.6	16.2	16.3	30.8	1.25
220	4.87	2.74	3.8	5.9	7.0	7.1	9.3	9.4	17.8	17.9	33.9	1.37
250	5.53	3.11	4.3	6.7	8.0	8.1	10.6	10.7	20.3	20.4	38.5	1.56
280	6.20	3.49	4.8	7.6	8.9	9.0	11.9	12.0	22.7	22.8	43.2	1.74
300	6.64	3.74	5.2	8.1	9.6	9.7	12.8	12.9	24.3	24.4	46.2	1.87

Screen			Projection Distance								Vertical Offset (in.)	
			M0 (0.77:1)	M1 (1.21÷1.45:1)		M2 (1.45÷1.93:1)		M3 (1.93÷3.67:1)		M4 (3.67÷6.97:1)		
Diagonal Size (in.)	Width (in.)	Height (in.)	Fixed Lens (ft.)	Min (ft.)	Max (ft.)	Min (ft.)	Max (ft.)	Min (ft.)	Max (ft.)	Min (ft.)	Max (ft.)	
100	87.2	49.0	5' 11"	8' 10"	10' 6"	10' 10"	13' 9"	14' 1"	26' 7"	26' 11"	50' 6"	24.5
120	104.6	58.8	6' 11"	10' 10"	12' 6"	12' 10"	16' 9"	17' 1"	31' 10"	32' 2"	60' 8"	29.4
150	130.7	73.5	8' 6"	9' 4"	15' 9"	16' 1"	21'	21' 4"	39' 8"	40'	75' 9"	36.8
180	156.9	88.2	10' 2"	13' 5"	18' 8"	19' 0"	24' 11"	25' 3"	47' 11"	48' 3"	90' 11"	44.1
200	174.3	98.1	11' 6"	17' 9"	21'	21' 4"	27' 11"	28' 3"	53' 2"	53' 6"	101' 1"	49.0
220	191.7	107.9	12' 6"	19' 4"	23'	23' 4"	30' 6"	30' 10"	58' 5"	58' 9"	111' 3"	53.9
250	217.9	122.6	14' 1"	22'	26' 3"	26' 7"	34' 9"	35' 1"	66' 7"	66' 11"	126' 4"	61.3
280	244.0	137.3	15' 9"	24' 11"	29' 2"	29' 6"	39'	39' 4"	74' 6"	74' 10"	141' 9"	68.6
300	261.5	147.1	17' 1"	26' 7"	31' 6"	31' 10"	41'	42' 4"	79' 9"	80' 1"	151' 7"	73.5

Due to constant product development, the calculated projection distance and value may have a margin of tolerance of ± 5%

8Dimensions

SIRIO dimensions in millimeters and (inches).

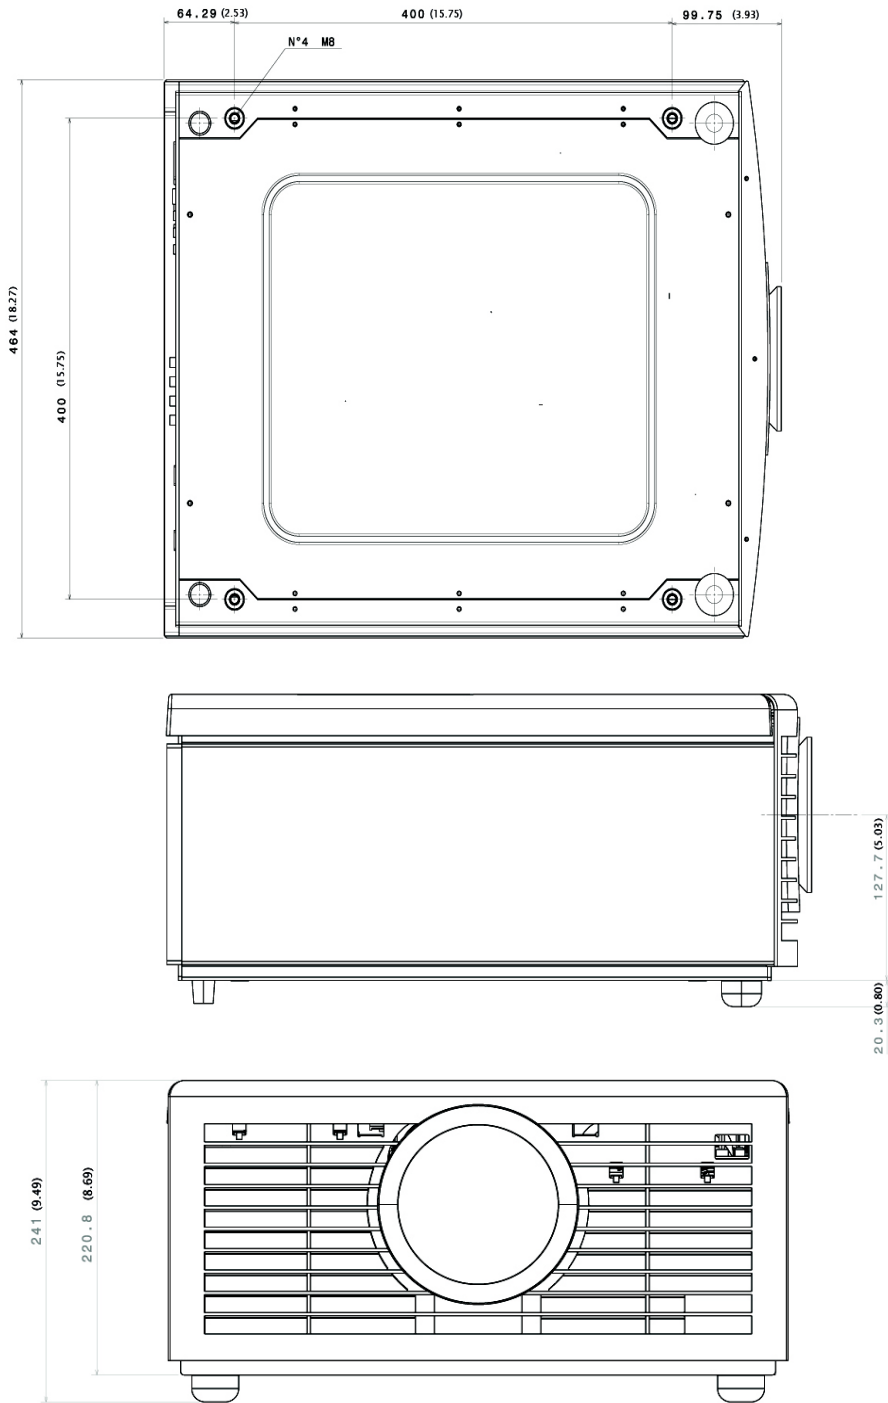

SIM2 Multimedia S.p.a.

Viale Lino Zanussi, 11
33170 Pordenone – ITALY
Phone: + 39 0434 383256
Fax: + 39 0434 383260
Email: info@sim2.it
www.sim2.com

SIM2 USA

SIM2 USA Inc.
10216 NW 47th Street
Sunrise, FL 33351
Phone: +1 (954) 442 2999
Email: sales@sim2usa.com
www.sim2usa.com

SIM2 BRIONVEGA Co., Ltd

Room 303-304, No. 244 Liaoning Road
Shanghai 200080 – CN
Phone/Fax: 86 1 62881991
Email: InfoCHINA@sim2.com

SIM2 UK

Steinway House Worth Farm
Little Horsted Nr. Uckfield
East Sussex TN22 5TT – UK
Phone: + 44 (0)1825 750850
Fax: + 44 (0)1825 750851
Email: info@sim2.co.uk
www.sim2.co.uk